

# ANKARO®

**MDL 100**

**MDL 150**

**MDL 200**

**MDL 300**

**MDL 400**

**MDL 500**

**User's manual**



**DVB**  
Digital Video  
Broadcasting



# **MDL series**

## **User's Manual (English)**



## INDEX

1 Introduction.....	5
2 Recommendations for best use of <b>MDL series</b> .....	6
3 Package contents .....	7
4 Technical specifications.....	8
5 Meter's power supply.....	20
6 Front panel description .....	21
6.1 Main keypad description .....	22
6.2 Rotary click wheel.....	28
7 Status bar.....	29
8 Connections .....	32
9 Meter operation.....	33
9.1 First time operation .....	33
9.2 Meter starting up .....	33
9.3 Factory default .....	33
9.4 RF cable connection .....	34
9.5 TV standard setup .....	34
9.6 Sensibility.....	35
9.6.1 Wheel .....	35
9.6.2 Click .....	35
9.6.3 Keys .....	35
9.6.4 Wheel rotation in menu .....	35
10 Measurements .....	36
10.1 Terrestrial signal measurement.....	37
10.1.1 Frequency band selection .....	37
10.1.2 Use spectrum mode to spot a signal .....	37
10.1.3 Measurement selection.....	38
10.1.4 Make measurements.....	39
10.1.5 Picture representation .....	41
10.2 Satellite signal measurement .....	43
10.2.1 Frequency band selection .....	43
10.2.2 Supply LNB power .....	44
10.2.3 Use spectrum mode to spot a signal .....	45
10.2.4 Measurement selection.....	46
10.2.5 Make measurements.....	48
10.2.6 Picture representation .....	49
10.2.7 DiSEqC switch.....	50
10.2.8 Motor Control.....	51
10.2.9 SatCr .....	52
10.3 Cable signal measurements .....	54
10.3.1 Frequency band selection .....	54
10.3.2 Use spectrum mode to spot a signal .....	55
10.3.3 Measurement selection .....	55
10.3.4 Make measurements .....	57
10.3.5 Picture representation .....	58
11 Programs .....	61
11.1 Edit programs.....	61
11.1.1 Create program.....	61
11.1.2 Save a program .....	62
11.1.3 Rename a program.....	63
11.1.4 Delete a program .....	64
11.1.5 Load program from USB .....	64
11.1.6 Save program to USB .....	65
11.1.7 Group management.....	65
11.1.8 Navigation by program.....	65

12 Key "fav" functions .....	66
12.1 Configuration.....	66
13 Autoscan function .....	67
14 Meter Backup .....	68
14.1 Copy all to USB.....	68
14.2 Restore Backup from USB .....	68
15 Clock adjustments.....	71
15.1 Time auto-set.....	71
15.2 GMT.....	71
15.3 Time.....	72
16 Wake up menu.....	73
17. Tools .....	75
17.1 Datalogger.....	75
17.1.1 New measurement .....	77
17.1.2 New measurement step by step.....	79
17.1.3 Watching the measures.....	79
17.1.4 Delete measures .....	80
17.1.5 Export measures .....	81
17.1.6 Group management.....	81
17.1.6.1 Creating a group .....	82
17.1.6.2 Copy a group .....	83
17.1.6.3 Delete a group .....	83
17.1.6.4 Add a program .....	84
17.1.6.5 Delete a program .....	85
17.1.6.6 Load group from USB.....	86
17.1.6.7 Group options .....	87
17.1.6.7.1 Name of the group.....	87
17.1.6.7.2 Pause in FM Band .....	88
17.1.6.7.3 Pause in Band switching.....	88
17.1.6.7.4 Kind of measure.....	89
17.1.6.7.5 Repeating.....	89
17.1.6.7.6 Period.....	90
17.1.6.7.7 Temporize measurements .....	90
17.1.7 Working Disk.....	90
17.2 Satellite finder .....	91
17.2.1 Identify the satellite.....	91
17.2.2 Searching a satellite.....	92
17.2.3 Options.....	93
17.2.3.1 Add a new satellite .....	94
17.2.3.2 Delete satellites.....	94
17.2.3.3 Import satellites .....	95
17.2.3.4 Export satellites .....	95
17.2.3.5 Show satellites .....	96
17.2.3.6 New satellite parameters.....	96
17.3 Band Scan.....	97
17.4 Transmodulators Programming.....	99
ANNEX 1. Ankamet Viewer .....	100
ANNEX 2. Channels plan .....	103
B/G CCIR STANDARD .....	104
B/G DE STANDARD .....	106
B/G IT STANDARD .....	108
L/L' STANDARD .....	110
D/K/K'/DK PAL STANDARD .....	111
I STANDARD .....	113
M/N STANDARD .....	114
B/B Australia STANDARD .....	115

## 1 INTRODUCTION

**Note:** This user's guide is adapted to software version v.1.83 of MDL.

The **MDL** is the second generation of ANKARO field strength meters based on the proven concept of the MDX. The aim of the MDL is being complementary to the MDX family.

The new **MDL** has been designed in order to provide most of the functionality of the MDX family, in a more compact package. The MDL and the MDX share the same user interface, and all the generated files are compatible between both families. All these features render the MDL a perfect complement to the MDX being an essential device for telecommunications installers and professional.

Some of the main features are hereafter explained:

- Measure of analog multistandard terrestrial (AMTV) and satellite signals (FMTV)
- Video line displaying for terrestrial analog signals
- Measure of digital terrestrial (DVB-T), satellite (DVB-S/S2) and cable (DVB-C) signals
- Analog (terrestrial) and digital image representation on colour TFT screen
- Same user interface as MDX
- Datalogger
- TFT 5" Color Monitor
- Extremely Compact and light design (under 2 Kg)
- Wide connectivity (USB, input and output Audio/Video minijack, RS232)
- High battery life (2 hours without LNB)

With all the above features, the **MDL** field strength meter will allow the user to analyze all television signals, solving every problem on a terrestrial, cable or satellite installation.

This is a common manual for the entire range of Field Strength Meters MDL. This manual is complete and it contains the information to make run the meter, although there are options which only can be used in some models.

In case that some chapter or section concerns only to some models and not to ALL models, this chapter will be marked as follows:

MDL 100	MDL 150	MDL 200
<b>MDL 100</b>	<b>MDL 150</b>	<b>MDL 200</b>
MDL 300	MDL 400	MDL 500
<b>MDL 300</b>	<b>MDL 400</b>	<b>MDL 500</b>

### 2 RECOMMENDATIONS FOR BEST USE OF MDL series

The aim of this manual is to provide the fundamentals of the operation of the field strength meters in order to make the best of it.

The **MDL** field strength meter is a portable devices, conceived for exterior use, with certain limitations:

- It is not advisable to use the strength meter under the rain; although it is water proof, it could be damaged if the water penetrates inside.
- It is recommended not to use the meter in case of extreme weather conditions, such as temperatures below 0 degrees or over 40 degrees centigrade
- Never use your meter as a standing support
- The mains power supply is designed for indoor use, so it must not be used outdoor. Always use the power supply adapter provided with your meter.

Please keep always in mind the following recommendations:

- Please note that the meter's battery is specifically designed for the device. An eventual replacement by any other, could cause a failure of operation, or even worse, a serious damage to the battery and to the meter.
- A field strength meter is a very sophisticated measurement device, sensitive to sudden temperature and humidity changes, and affected by impacts and vibrations.
- Never open the meter by yourself. Every manipulation inside the device requires specific instruments. An unqualified manipulation may cause serious damage in the meter.
- Always handle the meter with care, it is a high technology device that may be damaged in case of improper use.
- Please do not obstruct the ventilation orifices situated on both sides of the meter, in order not to overheat the system.
- It is important not to use poor quality connectors, nor right angle connectors and different adapters, since all these elements degrade the quality of the signal arriving to the meter's RF-IN socket.



### 3 PACKAGE CONTENTS

Please check the contents of your package in the following list:

- Field Strength Meter
- Bag
- Belt and support for the belt
- Mains power supply 20V 2,5Amp.
- Mains power cable for the power supply
- Adapter F-F female. Please note that this is a high quality adapter. Do not replace it by any other, since the frequency response is specific for this system.
- User's quick reference guide
- Document providing a list of the meter's components, as well as the information concerning - the meter's calibration.
- RCA-JACK
- (DB9 male / RJ 45 male) cable
- (DB9 male / DB9 male) cable
- Frequency plan guide

Please do not throw away the original box, it is specially designed for protecting your meter. You might find it useful for transportation, or in case you wish to have it calibrated in the future.

## 4 TECHNICAL SPECIFICATIONS

### MDL 100

#### RF Standards

- Satellite: C and Ku bands

#### Monitor

- Type: 5" (14cm) TFT color
- Color standards: PAL and SECAM.
- Audio amplifier: 1W inside the speaker

#### Programs

- Memories: 1000 programs could be saved inside the internal memory.
- Data Logger: 4000 measures could be saved inside the internal memory.
- These values could be downloaded through USB port.

#### LNC power supply

- Voltage: 0, 5V, 13V, 18V, 13V+22Khz and 18V+22Khz (shown by OSD).
- Max current.: 450 mA short circuit protected
- DiSEqC: 1.2

#### Auxiliary inputs / outputs

- A/V: Minijack Audio/Video input and output
- RS-232: Serial port for PC connection
- USB: Host Driver USB 2.0

#### Power Supply

- Battery: Li - Ion (30 W/hour)
- Battery level ind.: Continuous control on OSD
- Battery life: 2 h without LNB power supply
- Charging time: Aprox. 3 hours for 100% (it depends on battery previous charge)
- External: 20V / 2.5A

#### Mechanics

- Dimensions: 270x170x70mm + bag
- Weight: 1,850 Kg.

#### Frequency

- Range: 900-2150 MHz
- Tuning: Continuous in full band
- Steps: 500 KHz (satellite band)

#### Input

- Impedance: 75 Ohms
- Connector: "F" type (male) (+FBU-FBU adaptor)
- Protection:  $\pm 50$  VDC, 130dB $\mu$ V (3V RMS)
- Attenuator: 0 - 60dB, AUTO range mode selectable

#### Spectrum

- Bands: 900-2150 MHz
- Detection: Peak and Average
- Display mode: Horizontal sweep and logarithmic amplitude
- Marker: Single
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Span: Full, 500, 200, 100, 50, 20 or 10 MHz
- Resolution filter: 1MHz

#### - Analog signals: Level, C/N.

- Range: SAT: 30 - 125 dB $\mu$ V
- Units: dB $\mu$ V, dBmV o dBm
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Acoustic signal: Audio frequency proportional to signal level
- Image: NO

### Digital

#### DVB-S (QPSK)

- Measurements: Power, Noise Margin, BER before and after Viterbi, non recovered errors, C/N, MER
- Standard: DVB-S and DSS
- Symbol Rate: up to 45Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

#### Decoding MPEG2

- Available to display FTA programs (Free to Air – free channels).
- List of channels of the Digital Stream, indicating if they are Video, Radio, Data, SD/HD, free or scrambled.
- Viewing of the NID and ONID.
- Auto or manual selection of the PID of Video/Audio/PCR

## MDL 150

### RF Standards

- FM: 88-108 MHz
- Terrestrial: B/G (CCIR),  
B/G DE, S band channels in Germany  
B/G IT, III band channels in Italy  
M (PAL)  
L/L' (France)  
I (UK)  
D/K/K' (O.I.R.T.)  
M/N (USA and Japan)  
BB\_AU (Australia)  
D/K PAL

### Monitor

- Type: 5" (14cm) TFT color
- Color standards: PAL and SECAM
- Audio amplifier: 1W inside the speaker

### Programs

- Memories: 1000 programs could be saved inside the internal memory.
- Data Logger: 4000 measures could be saved inside the internal memory.
- These values could be downloaded through USB port.

### Antenna power supply

- Voltage: 0, 5V, 13V, 18V, 13V+22Khz and 18V+22Khz (shown by OSD).
- Max current.: 450 mA short circuit protected
- DiSEqC: 1.2

### Auxiliary inputs / outputs

- A/V: Minijack Audio/Video input and output
- RS-232: Serial port for PC connection
- USB: Host Driver USB 2.0

### Power Supply

- Battery: Li - Ion (30 W/hour)
- Battery level ind.: Continuous control on OSD
- Battery life: 2 h without Antenna power supply
- Charging time: Aprox. 3 hours for 100% (it depends on battery previous charge)
- External: 20V / 2.5A

### Mechanics

- Dimensions: 270x170x70mm + bag
- Weight: 1,850 Kg.

### Frequency

- Range: 47-862 MHz
- Tuning: Continuous in full band
- Steps: 50KHz (terrestrial band)

### Input

- Impedance: 75 Ohms
- Connector: "F" type (male) (+FBU-FBU adaptor)
- Protection:  $\pm 50$  VDC, 130dB $\mu$ V (3V RMS)
- Attenuator: 0 - 60dB, AUTO range mode selectable

## Spectrum

- Bands: 47-862 MHz
- Detection: Peak and Average
- Display mode: Horizontal sweep and logarithmic amplitude
- Marker: Single
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Span: Full, 500, 200, 100, 50, 20 or 10 MHz
- Resolution filter: 1MHz

- **Analog signals:** Level, Video/Audio level, C/N, sync pulse

- Range: TV: 20 - 125 dBuV
- Units: dBuV, dBmV o dBm
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Acoustic signal: Audio frequency proportional to signal level
- Image: YES

## Digital

### DVB-T (COFDM)

- Measurements: Power, Noise Margin, BER before and after Viterbi, non recovered errors, MER, C/N
- Modes FFT: 2K, 8K and AUTO
- Guard intervals: 1/4, 1/8, 1/16, 1/32 and AUTO
- Internal modulations: 64 QAM, 16QAM and QPSK
- Band Widths: 8, 7, 6MHz and AUTO
- Offset: Automatically manager, up to  $\pm 500$  KHz
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

## Decoding MPEG2

- Available to display FTA programs (Free to Air – free channels).
- List of channels of the Digital Stream, indicating if they are Video, Radio, Data, SD/HD, free or scrambled.
- Viewing of the NID and ONID.
- Auto or manual selection of the PID of Video/Audio/PCR

## MDL 200

### RF Standards

- Satellite: C and Ku bands

### Monitor

- Type: 5" (14cm) TFT color
- Color standards: PAL and SECAM
- Audio amplifier: 1W inside the speaker

### Programs

- Memories: 1000 programs could be saved inside the internal memory.
- Data Logger: 4000 measures could be saved inside the internal memory.
- These values could be downloaded through USB port.

### LNC power supply

- Voltage: 0, 5V, 13V, 18V, 13V+22Khz and 18V+22Khz (shown by OSD).
- Max current.: 450 mA short circuit protected
- DiSEqC: 1.2

### Auxiliary inputs / outputs

- A/V: Minijack Audio/Video input and output
- RS-232: Serial port for PC connection
- USB: Host Driver USB 2.0

### Power Supply

- Battery: Li - Ion (30 W/hour)
- Battery level ind.: Continuous control on OSD
- Battery life: 2 h without LNB power supply
- Charging time: Aprox. 3 hours for 100% (it depends on battery previous charge)
- External: 20V / 2.5A

### Mechanics

- Dimensions: 270x170x70mm + bag
- Weight: 1,850 Kg.

### Frequency

- Range: 900-2150MHz
- Tuning: Continuous in full band
- Steps: 500KHz (satellite band)

### Input

- Impedance: 75 Ohms
- Connector: "F" type (male) (+FBU-FBU adaptor)
- Protection:  $\pm 50$  VDC, 130dB $\mu$ V (3V RMS)
- Attenuator: 0 - 60dB, AUTO range mode selectable

### Spectrum

- Bands: 900-2150MHz
- Detection: Peak and Average
- Display mode: Horizontal sweep and logarithmic amplitude
- Marker: Single
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Span: Full, 500, 200, 100, 50, 20 or 10 MHz
- Resolution filter: 1MHz

### - Analog signals: Level, C/N.

- Range: SAT: 30 -125 dB $\mu$ V
- Units: dB $\mu$ V, dBmV o dBm
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Acoustic signal: Audio frequency proportional to signal level
- Image: NO

**Digital****DVB-S (QPSK)**

- Measurements: Channel Power, Noise Margin, C/N, BER before and after Viterbi, MER, Wrong Packets
- Standards: DVB and DSS
- Symbol Rate: up to 45Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

**DVB-S2 (QPSK and 8PSK)**

- Modes: QPSK and 8PSK
- Measurements: Channel Power, Moise Margin, C/N, BER before and alter of the decoder LDPC/BCH, MER, Wrong Packets
- Symbol Rate: up to 40Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

**Decoding MPEG2**

- Available to display FTA programs (Free to Air – free channels).
- List of channels of the Digital Stream, indicating if they are Video, Radio, Data, SD/HD, free or scrambled.
- Viewing of the NID and ONID.
- Auto or manual selection of the PID of Video/Audio/PCR

## MDL 300

### RF Standards

- FM: 88-108 MHz
- Terrestrial: B/G (CCIR),  
B/G DE, S band channels in Germany  
B/G IT, III band channels in Italy  
M (PAL)  
L/L' (France)  
I (UK)  
D/K/K' (O.I.R.T.)  
M/N (USA and Japan)  
BB\_AU (Australia)  
D/K PAL
- Satellite: C and Ku bands

### Monitor

- Type: 5" (14cm) TFT color
- Color standards: PAL and SECAM
- Audio amplifier: 1W inside the speaker

### Programs

- Memories: 1000 programs could be saved inside the internal memory.
- Data Logger: 4000 measures could be saved inside the internal memory.
- These values could be downloaded through USB port.

### LNC power supply

- Voltage: 0, 5V, 13V, 18V, 13V+22Khz and 18V+22Khz (shown by OSD).
- Max current.: 450 mA short circuit protected
- DiSEqC: 1.2

### Auxiliary inputs / outputs

- A/V: Minijack Audio/Video input and output
- RS-232: Serial port for PC connection
- USB: Host Driver USB 2.0

### Power Supply

- Battery: Li - Ion (30 W/hour)
- Battery level ind.: Continuous control on OSD
- Battery life: 2 h without LNB power supply
- Charging time: Aprox. 3 hours for 100% (it depends on battery previous charge)
- External: 20V / 2.5A

### Mechanics

- Dimensions: 270x170x70mm + bag
- Weight: 1,850 Kg.

### Frequency

- Range: 47-862 MHz and 900-2150 MHz
- Tuning: Continuous in full band
- Steps: 50KHz (terrestrial band) and 500 KHz (satellite band)

### Input

- Impedance: 75 Ohms
- Connector: "F" type (male) (+FBU-FBU adaptor)
- Protection:  $\pm 50$  VDC, 130dB $\mu$ V (3V RMS)
- Attenuator: 0 - 60dB, AUTO range mode selectable

### Spectrum

- Bands: 47-862 MHz / 900-2150 MHz
- Detection: Peak and Average
- Display mode: Horizontal sweep and logarithmic amplitude
- Marker: Single
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Span: Full, 500, 200, 100, 50, 20 or 10 MHz
- Resolution filter: 1MHz



- **Analog signals:** Level, Video/Audio level, C/N, sync pulse
- Range: TV: 20 - 125 dBuV  
SAT: 30 - 125 dBuV
- Units: dBuV, dBmV o dBm
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Acoustic signal: Audio frequency proportional to signal level
- Image: YES (TERRESTRIAL)

## Digital

### DVB-S (QPSK)

- Measurements: Power, Noise Margin, BER before and after Viterbi, non recovered errors, C/N, MER
- Standard: DVB-S and DSS
- Symbol Rate: up to 45Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### DVB-T (COFDM)

- Measurements: Power, Noise Margin, BER before and after Viterbi, non recovered errors, MER, C/N
- Modes FFT: 2K, 8K and AUTO
- Guard intervals: 1/4, 1/8, 1/16, 1/32 and AUTO
- Internal modulations: 64 QAM, 16QAM and QPSK
- Band Widths: 8, 7, 6MHz and AUTO
- Offset: Automatically manager, up to  $\pm 500$ Khz
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### Decoding MPEG2

- Available to display FTA programs (Free to Air – free channels).
- List of channels of the Digital Stream, indicating if they are Video, Radio, Data, SD/HD, free or scrambled.
- Viewing of the NID and ONID.
- Auto or manual selection of the PID of Video/Audio/PCR

## MDL 400

### RF Standards

- FM: 88-108 MHz
- Terrestrial: B/G (CCIR),  
B/G DE, S band channels in Germany  
B/G IT, III band channels in Italy  
M (PAL)  
L/L' (France)  
I (UK)  
D/K/K' (O.I.R.T.)  
M/N (USA and Japan)  
BB\_AU (Australia)  
D/K PAL
- Satellite: C and Ku bands

### Monitor

- Type: 5" (14cm) TFT color
- Color standards: PAL and SECAM
- Audio amplifier: 1W inside the speaker

### Programs

- Memories: 1000 programs could be saved in- side the internal memory.
- Data Logger: 4000 measures could be saved inside the internal memory.
- These values could be downloaded through USB port.

### LNC power supply

- Voltage: 0, 5V, 13V, 18V, 13V+22Khz and 18V+22Khz (shown by OSD).
- Max current.: 450 mA short circuit protected
- DiSEqC: 1.2

### Auxiliary inputs / outputs

- A/V: Minijack Audio/Video input and output
- RS-232: Serial port for PC connection
- USB: Host Driver USB 2.0

### Power Supply

- Battery: Li - Ion (30 W/hour)
- Battery level ind.: Continuous control on OSD
- Battery life: 2 h without LNB power supply
- Charging time: Aprox. 3 hours for 100% (it depends on battery previous charge)
- External: 20V / 2.5A

### Mechanics

- Dimensions: 270x170x70mm + bag
- Weight: 1,850 Kg.

### Frequency

- Range: 47-862 MHz and 863-2150MHz
- Tuning: Continuous in full band
- Steps: 50KHz (terrestrial band) and 500KHz (satellite band)

### Input

- Impedance: 75 Ohms
- Connector: "F" type (male) (+FBU-FBU adaptor)
- Protection:  $\pm 50$  VDC, 130dB $\mu$ V (3V RMS)
- Attenuator: 0 - 60dB, AUTO range mode selectable

### Spectrum

- Bands: 47-862MHz and 863-2150MHz
- Detection: Peak and Average
- Display mode: Horizontal sweep and logarithmic amplitude
- Marker: Single
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Span: Full, 500, 200, 100, 50, 20 or 10 MHz
- Resolution filter: 1MHz

- **Analog signals:** Level, Video/Audio level, C/N, sync pulse
- Range: TV: 20 - 125 dBuV  
SAT: 30 - 125 dBuV
- Units: dBuV, dBmV o dBm
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Acoustic signal: Audio frequency proportional to signal level
- Image: YES (TERRESTRIAL)

## Digital

### DVB-S (QPSK)

- Measurements: Channel Power, Noise Margin, C/N, BER before and after Viterbi, MER, Wrong Packets
- Standards: DVB and DSS
- Symbol Rate: up to 45Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### DVB-S2 (QPSK and 8PSK)

- Modes: QPSK and 8PSK
- Measurements: Channel Power, Noise Margin, C/N, BER before and alter of the decoder LDPC/BCH, MER, Wrong Packets
- Symbol Rate: up to 40Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### DVB-T (COFDM)

- Measurements: Channel Power, Noise Margin, C/N, BER before and alter Viterbi, MER, Wrong Packets
- Mode FFT: 2K, 8K and AUTO
- Guard Intervals: 1/4, 1/8, 1/16 y 1/32, AUTO
- Internal Modulations: QPSK, 16QAM, 64QAM (AUTO)
- Band Widths: 8, 7, 6MHz and AUTO
- Offset: Automatically manager, up to  $\pm 500$ KhZ
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### Decoding MPEG2

- Available to display FTA programs (Free to Air – free channels).
- List of channels of the Digital Stream, indicating if they are Video, Radio, Data, SD/HD, free or scrambled.
- Viewing of the NID and ONID.
- Auto or manual selection of the PID of Video/Audio/PCR

## MDL 500

ENGLISH

### RF Standards

- FM: 88-108 MHz
- Terrestrial: B/G (CCIR),  
B/G DE, S band channels in Germany  
B/G IT, III band channels in Italy  
M (PAL)  
L/L' (France)  
I (UK)  
D/K/K' (O.I.R.T.)  
M/N (USA and Japan)  
BB\_AU (Australia)  
D/K PAL
- Satellite: C and Ku bands

### Monitor

- Type: 5" (14cm) TFT color
- Color standards: PAL and SECAM
- Audio amplifier: 1W inside the speaker

### Programs

- Memories: 1000 programs could be saved in- side the internal memory.
- Data Logger: 4000 measures could be saved inside the internal memory.
- These values could be downloaded through USB port.

### LNC power supply

- Voltage: 0, 5V, 13V, 18V, 24V, 13V+22Khz and 18V+22Khz (shown by OSD).
- Max current.: 450 mA short circuit protected
- DiSEqC: 1.2

### Auxiliary inputs / outputs

- A/V: Minijack Audio/Video input and output
- RS-232: Serial port for PC connection
- USB: Host Driver USB 2.0

### Power Supply

- Battery: Li - Ion (30 W/hour)
- Battery level ind:Continuous control on OSD
- Battery life: 2 h without LNB power supply
- Charging time: Aprox. 3 hours for 100% (it depends on battery previous charge)
- External: 20V / 2.5A

### Mechanics

- Dimensions: 270x170x70mm + bag
- Weight: 1,850 Kg.

### Frequency

- Range: 5-862 MHz and 863-2150MHz
- Tuning: Continuous in full band
- Steps: 50KHz (terrestrial band) and 500KHz (satellite band)

### Input

- Impedance: 75 Ohms
- Connector: "F" type (male) (+FBU-FBU adaptor)
- Protection:  $\pm 50$  VDC, 130dB $\mu$ V (3V RMS)
- Attenuator: 0 - 60dB, AUTO range mode selectable

### Spectrum

- Bands: 5-862MHz and 863-2150MHz
- Detection: Peak and Average
- Display mode: Horizontal sweep and logarithmic amplitude
- Marker: Single
- Precision: Terr: $\pm 1.5$  dB @ 25°C, Sat:  $\pm 2$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Span: Full, 500, 200, 100, 50, 20 or 10 MHz
- Resolution filter: 300 kHz

- **Analog signals:** Level, Video/Audio level, C/N, sync pulse
- Range: TV: 20 - 125 dBuV  
SAT: 30 - 125 dBuV
- Units: dBuV, dBmV o dBm
- Precision:  $\pm 1.5$  dB @ 25°C of environment temperature after a heating of 30 minutes.
- Acoustic signal: Audio frequency proportional to signal level
- Image: YES (TERRESTRIAL)

## Digital

### DVB-S (QPSK)

- Measurements: Channel Power, Noise Margin, C/N, BER before and after Viterbi, MER, Wrong Packets
- Standards: DVB and DSS
- Symbol Rate: up to 45Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### DVB-S2 (QPSK and 8PSK)

- Modes: QPSK and 8PSK
- Measurements: Channel Power, Noise Margin, C/N, BER before and alter of the decoder LDPC/BCH, MER, Wrong Packets
- Symbol Rate: up to 40Ms
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### DVB-T (COFDM)

- Measurements: Channel Power, Noise Margin, C/N, BER before and alter Viterbi, MER, Wrong Packets
- Mode FFT: 2K, 8K and AUTO
- Guard Intervals: 1/4, 1/8, 1/16 y 1/32, AUTO
- Internal Modulations: QPSK, 16QAM, 64QAM (AUTO)
- Band Widths: 8, 7, 6MHz and AUTO
- Offset: Automatically manager, up to  $\pm 500$ Khz
- Image:
  - MPEG-2 SD: YES
  - MPEG-4: NO

### DVB-C (QAM)

- Measurements: Channel Power, Noise Margin, BER before Viterbi, MER, Wrong Packets.
- Symbol Rate: up to 7Ms
- Constellations: 256, 128, 64, 32 and 16 QAM.
- Band Widths: 8, 7MHz.
- MER Resolution: 0.1dB
- MER Measurement: Max. 35 dB.

### Decoding MPEG2

- Available to display FTA programs (Free to Air – free channels).
- List of channels of the Digital Stream, indicating if they are Video, Radio, Data, SD/HD, free or scrambled.
- Viewing of the NID and ONID.
- Auto or manual selection of the PID of Video/Audio/PCR.

### 5 METER'S POWER SUPPLY

The field strength meter may receive its power supply via its internal batteries or using the external power supply provided with the meter.

The **MDL series** includes a 30W/hour Li-Ion battery, which will provide over two hours of operation (without feeding LNC).


In order to charge the battery, please connect the 20V 2,5A power adapter output to the meter after having checked that it is turned off. The LED indicating battery charge will blink during charge. At the end of the charge cycle the LED will stop blinking and will stay continuously ON.

Meter's battery could be charged with the device switched on or switched off.

Important: it's highly recommended to charge the battery only when it has been completely used. Moreover, in order to have a 100% full charged battery, it could be necessary to charge it at least for 3 hours with the meter switched-off.

## 6 FRONT PANEL DESCRIPTION

The **MDL** front panel presents the following appearance:

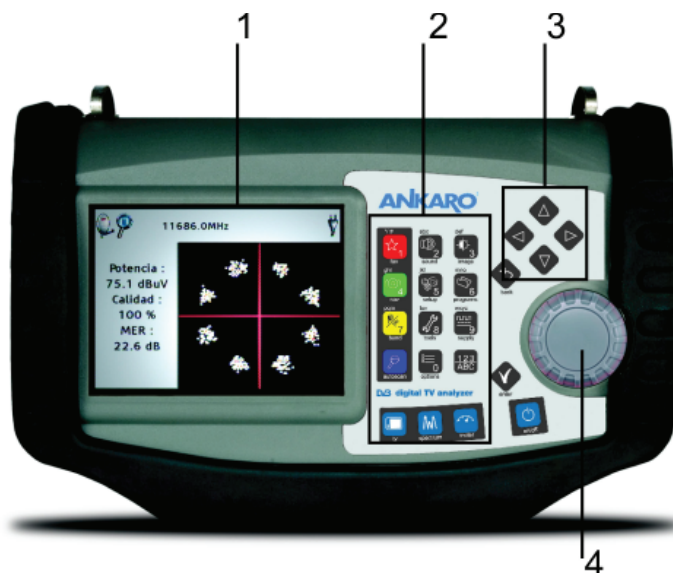

The front panel of the test equipment is made of 4 main parts:

- 1.- Monitor.** It displays the OSD menu that allows to navigate through the different options to display the spectrum, measurements, pictures, etc.
- 2.- Main keypad.** This keypad is composed of several keys with different functions: on/off key, band key, menu keys, ... Some of these keys make part of a numerical keypad that can be used to enter the frequency value, channel or program value.
- 3.- Arrow keys.** These four arrow keys have a similar function than the rotary wheel. They allow to navigate up and down through the OSD menu. Moreover the arrow keys allow to increase or decrease different values as span, volume, ... depending on the main mode currently selected.
- 4.- Click rotary wheel.** It allows to navigate easily through the options of the OSD menu, just turning to the left or right the wheel. It's also possible to confirm the selected option doing a click at the center of the wheel.

## 6.1 Main keypad description

ENGLISH



**fav**

By default, to switch from an Analogue carrier to a Digital one. It can be configured with other functions.

With numeric entry active it is #1.


With alphabetic entry active, it is \* / #



**sound**

Audio menu. The options are the following:

- Volume (Level 0-100%)
- Audio type (Audio/Buzzer): Selecting the type of audio in "Buzzer", the speaker will buzz relative to the level of the signal received. On the top status bar will appear the following icon.



If the Buzzer option is selected, the audio of the channel will be substitute by the buzz.

With numeric entry active it is #2.

With alphabetic entry active, it is a b c



**image**

Picture menu. The options are the following:

- Brightness: 0-100 %
- Contrast: 0-100%
- TFT backlight: 0-100%
- External Video: Off / On. It will allow enable/disable the input of the external video.

**NOTE: Once selected the external video input, the meter only will leave activated the keys "Sound" and "Image", allowing only watching on TV Mode, and disabling the spectrum and measures mode.**

- Video line: In analogue signals, you can overlap to the picture of the tuned channel, the oscillogram of one of the lines of the composed video. MDL 300 MDL 400 MDL 150 MDL 500

- Video line number: The line to be showed MDL 300 MDL 400

MDL 150 MDL 500

- With numeric entry active it is #3.

With alphabetic entry active, it is d e f



**nav**

Setup the navigation mode: by frequency, by channel (it is available only in terrestrial band), by program, by group or by SatCr (this one only in satellite band).

With numeric entry active it is #4.

With alphabetic entry active, it is g h i





## setup

Setup meter menu. The options are the following:

### 1. System:

- Language
- Beep: key's beep
- Favorite key config
- System info
- Factory default
- Firmware upgrade
- Update Autoscan
- Sensibility

### 2. Power off modes:

- On/Off key: (stand by / switched off)
- Auto standby (battery): (Never/ 1min / 2min / 3min / 4min / 5 min / 10 min / 15 min 30 min / 60 min )
- Auto power off (battery): (Never/ 1min / 2min / 3min / 4min / 5 min / 10 min / 15 min 30 min / 60 min / 120 min)
- Auto standby (DC): (Never/ 1min / 2min / 3min / 4min / 5 min / 10 min / 15 min 30 min / 60 min )
- Auto power off (DC): (Never/ 1min / 2min / 3min / 4min / 5 min / 10 min / 15 min 30 min / 60 min / 120 min )

### 3. RF:

- Units: (dbuV, dBmV, dBm)
- Terrestrial standard: (B/G, B/G DE, B/G IT, L/L, M, NTSC, MPAL, D/K, I, BB\_AU, D/K PAL) MDL 300 MDL 400  
MDL 150 MDL 500
- Cable standard: (B/G, B/G DE, B/G IT, L/L, M, NTSC, MPAL, D/K, I, BB\_AU, D/K PAL) MDL 500
- Satellite local osc: (IF, C, KU, K9750, K10000, K10600, K10700, K10750, K11250, K11300, K11325) MDL 100 MDL 200 MDL 300 MDL 400 MDL 500
- Cable band: (Active, hidden) MDL 500
- Band navigation: (Linear, curl)
- Autoscan Standard: (All, Selected) For scanning all the standards or only the current one. When all the standards are being scanner, the first one scanner will be the current one.
- Resolution filter: 1 MHz MDL 100 MDL 200 MDL 300  
MDL 400 MDL 150, 300 KHz MDL 500

## 4. Backup: Function to restore the system:

- 1) Save all datas to USB: Function to make a security copy into a USB device.
- 2) Restore datas from USB: Function for restoring a copy of security from a USB device.

Depending on the type of file, there are different options to restore: All, Programs, Autoscans, Satellites or Data logger).

## 5. Clock: Time and date setup

**6. Wake up:** you can configure the alarms so that the meter is powered on automatically

With numeric entry active it is #5.

With alphabetic entry active, it is j k l



## programs

Programs menu. The options are the following:

- Create program
- Save program
- Rename program
- Delete program
- Load programs from USB
- Save programs to USB
- Group management

With numeric entry active it is #6.

With alphabetic entry active, it is m n o



## band

Band selection:

- Terrestrial 47-862 MHz
 

MDL 300
MDL 400
MDL 150
- Cable 5-862 MHz
 

MDL 500
- Satellite IF: 900-2150 MHz
 

MDL 100
MDL 200
MDL 300

With numeric entry active it is #7.

With alphabetic entry active, it is p q r s



## tools

Tools menu:

- Datalogger
- Satellite finder
  - MDL 100
  - MDL 200
  - MDL 300
  - MDL 400
  - MDL 500
- Band Scan
  - MDL 300
  - MDL 400
  - MDL 150
  - MDL 500
- PRO 200 mode
- Transmodulator Programming

With numeric entry active it is #8.

With alphabetic entry active, it is t u v



## supply

Power supply menu:

- RF IN voltage: (Off, 5V, 13 V, 18V, 24V( MDL 500 )
- Tono 22 KHz: (Off, On, Auto)
- DiSEqC switch (Off, A, B, C, D)
- RF voltage on power up: (Off, On)
- Motor
- SatCR

With numeric entry active it is #9.

With alphabetic entry active, it is w x y z



## autoscan

This function allows tuning the selected carrier automatically, it is, it carries out an auto scanning of the carrier. In case the carrier is not found, an error message will be displayed.



## options

Signals setup options:

1. **Carrier mode:** (Analog, digital)
2. **Digital modulation** (it depends on selected band)

### COFDM Setup:

MDL 300

MDL 400

MDL 150

MDL 500

1. Mode: (Auto, 8K, 2 K)
2. Spectrum inversion: (Auto, On, Off)
3. Guard interval: (Auto, 1/4, 1/8, 1/16, 1/32)
4. Bandwidth: (Auto, 8 MHz, 7 MHz, 6MHz)
5. Priority: (High, low)
6. Offset:(Auto, 0 , +125, -125, +166, -166, +333, -333, +500, -500). The default value for Span is 50 MHz.

### QPSK Setup:

MDL 100

MDL 200

MDL 300

MDL 400

MDL 500

1. Symbol rate: (1000-50000)
2. Mode: (DVB, DSS)
3. Spectrum inversion: (Auto, On, Off)
4. Auto symbol rate: (On, Off)
5. DVB: (DVBS1, DVBS2, AUTO) MDL 200 MDL 400
6. Constellation display (Off, Full, 1,2,3,4) To show the constellation diagram in measurement mode MDL 200

MDL 400

MDL 500

The default value for Span in Satellite is 100 MHz.

### QAM Setup:

MDL 500

1. Symbol rate: (870-7000)
2. Spectrum inversion: (Auto, On, Off)
3. Constellation: (256, 128, 64, 32, 16)
4. Constellation display (Off, Full, 1,2,3,4) To show the constellation diagram in measurement mode.
5. The Span value by default in cable is 50 MHz.

## 3. DVB Service

1. Mode: (Auto, Manual)
2. Video PIDs: (1-65535)
3. Audio PIDs: (1-65535)
4. PCR PID: (1-65535)
5. Program selection (only when tuned)

## 4. Spectrum configuration

1. Span: (10 MHz, 20 MHz, 50 MHz, 100 MHz, 200 MHz, 500 MHz, Full)
2. Marker values (Marker, Measure) To get the value of the marker in a punctual point (Marker) or the real value of the measurement of the channel (Measurement).
3. Sweep resolution: (Max, High, Medium, Low)

4. Detector mode:(Peak, sample, auto): Choose detection mode option in "Peak" for analogue signals/Detection mode in "Sample" for digital signals / "Auto": MDL will choose it automatically depending on the kind of signal.

**5. Reference level** (Auto, 130 dB, 120dB, 110 dB, 100 dB, 90dB, 80 dB, 70 dB)

**6. Group Name:** The name of the group stored in the Datalogger appears. Note: In case any group is created in the Datalogger, it won't be possible to navigate in group mode. With numeric entry active it is #0.



**123/abc**

Numeric and alphabetic entry activator. When program mode selected, this key shows a menu for select directly one registered program.



**back**

Cancel or return to previous action without modifying.



**enter**

Confirm the selected option.



**tv**

Display the picture of the tuned channel on the TFT monitor. If selected channel is digital, the monitor will represent the picture of the first transponder / multiplex program



**spectrum**

Display the frequency spectrum on the monitor.



**meter**

Display the measurements values of the selected signal. The information depends on the signal type:

**Analog signals:** Level, C/N, audio

**Digital signals:** Power, C/N, Quality, BER before and after Viterbi, MER



**Up / down arrow keys**

Movement inside the OSD menu options. When a digital signal is locked, these keys allow to navigate through the different program services.



**Left / right  
arrow keys**

In picture mode, these keys allow to modify audio volume. In spectrum mode, they modify the span




**on / off**

Meter switch on-off

## 6.2 Rotary Click wheel

The click rotary wheel is one of the main MDL controls. It manages in an easy way the navigation through the menu options. The actions of the wheel are the following three: left turn, right turn and click functions. Using them is possible to manage the whole OSD menu.

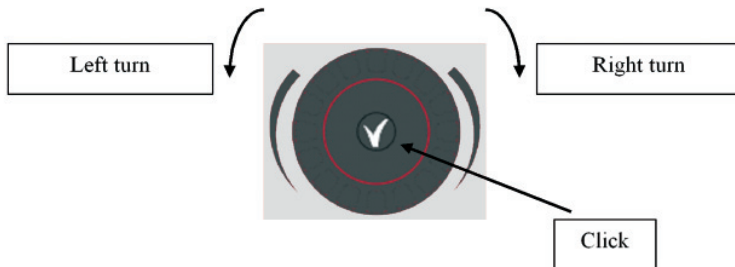

Turning the wheel, it's possible to go up and down through the different options of the menu. If the monitor is showing a spectrum with signals, the wheel movements will sweep the band. A short click on the wheel is interpreted as an OK (it confirms the selection); a long click cancels the action and goes out the OSD.

7 STATUS BAR

The status bar on top of the screen holds important information about meter status. It is always present, exception when in pure TV mode. It offers useful information about selected options, frequency, band, and battery status.



The following table shows the icon and the functions of each of them:

Band

Information about the selected frequency band



Cable band (5-862 MHz) **MDL 500**

Terrestrial band (47-862 MHz) **MDL 300** **MDL 400** **MDL 150** **MDL 500**

Satellite band (900-2150 MHz) **MDL 100** **MDL 200** **MDL 300** **MDL 400**  
**MDL 500**

Spectrum mode

Information about the selected spectrum mode and selected carrier



Analog mode

Digital model

Analog locked



Digital locked

## Power supply mode

Information about selected DiSEqC switch

MDL 100

MDL 200

MDL 300

MDL 400

MDL 500

Switch A

Switch B

Switch C

Switch D

## Satellite band and polarity

Information about satellite band and selected polarity

MDL 100

MDL 200

MDL 300

MDL 400

MDL 500

Vertical low

Vertical high

Horizontal low

Horizontal high

## Audio

Information about audio status



Audio On





Audio Mute



Mode Buzzer



**USB**

USB device connected




**Battery**

It shows the real level of battery

## 8 CONNECTIONS

All the meter connections are available in the back panel. The connectors and indicators are:

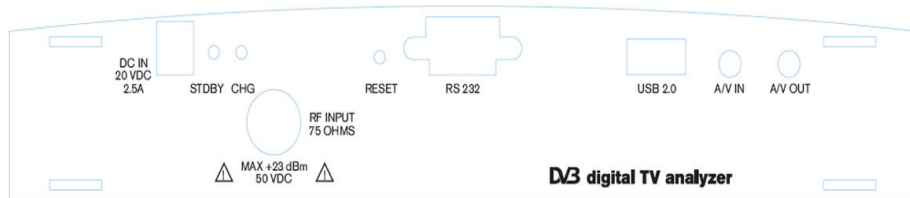

- DC IN. Supply connector for the 20V external power supply
- STBY LED. Blinks when the meter is in standby mode and when the firmware is being updated
- CHG LED. Blinks when the meter is charging, and stays continuously on when the charge is completed
- RF INPUT. This F male connector is the signal input for the meter. It is necessary to plug the provided female-female F adapter (FBU-FBU) prior to plug the F male signal cable into the meter
- RESET. This button performs a hardware reset to the meter. The meter will be reset to its default state. The date and time will be lost, but the general settings, programs and stored measurements will be saved
- RS232. This port allows updating the meter's firmware
- USB 2.0. This port allows firmware upgrades and data upload / downloads through USB mass storage devices
- A/V IN. This mini jack connector allows feeding analog audio/video (CVBS) into the meter
- A/V OUT. This mini jack connector allows sending analog audio/video (CVBS) to other devices

**NOTE:** For **enabling/disabling the external video input** you should push the key **"3 Image"** and navigate up to the **"External Video"** option. Please, select between On/Off to enable/disable the external video input through the Mini Jack A/V IN connector.

### Support for External Hard Disks USB 2.0 directly fed from the meter

The MDL is capable of feeding the external hard disks USB 2.0 always that they respect the limitation of current to 500 mA established in the USB norm.

## 9 METER OPERATION

### 9.1 First time operation

Before using your meter for the first time, please charge it completely (follow the indications in the chapter "Meter's Power Supply" (The battery is completely charged at the factory once the meter is finished, but the battery may be low when you purchase it).

### 9.2 Meter starting up

The MDL field strength meter is ready to begin work with it, therefore there is not any kind of installation to do for starting it up.

Press the ON/OFF key to switch on the meter. The power may be supplied through the mains or through the internal battery.


Once it has been switched on, the monitor shows a picture with ANKARO logo, meter serial number and current firmware version. This information is important if customer service is requested for technical support regarding the meter.



### 9.3 Factory default

You can find this option in the menu "Set Up --> System --> Default Values". Once you have selected it, it resets the meter, getting back to the factory default values.

After executing the Default Values, the following screen will be shown:

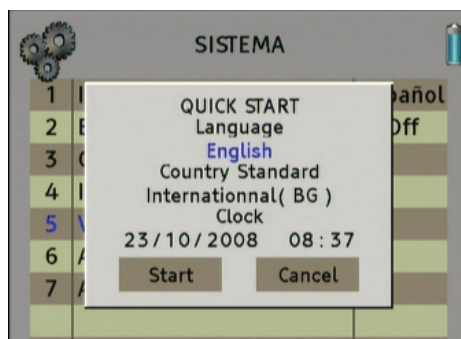

In this screen you can select the languages of the menus, the RF Standard, the Date and the Time of the meter. Use the rotary key to change them and select the correct values.

9.4 RF cable connection

Connect the input RF coaxial cable to RF-IN F connector, once the FBU-FBU adaptor has been installed. If necessary, for future replacement of the adaptor it's important to install a high quality adaptor that don't disturb input signal or create impedance problems. In this way it will be possible supply the meter with a real quality RF signal.

9.5 TV standard setup


MDL 300

MDL 400


MDL 150

MDL 500

It's important to setup the right TV standard in order to work correctly with the meter. It's possible also to setup the measurement units. To do it, press "setup" key on the front panel. After this, select "RF" option using the rotary wheel. Finally, select the second option "Terrestrial standard" and accept clicking on the wheel.

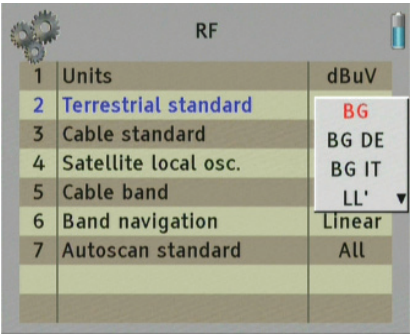


Measurement units could be selected pressing "setup" key and selecting "units" option. The available options are dBuV, dBmV and dBm based on user's preference.

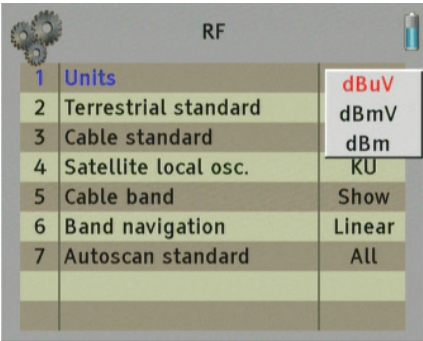


9.6 Sensibility

In order to access to this tool, press the 5 key “setup” and select the “System” option. Later, select the “Sensitivity” option.

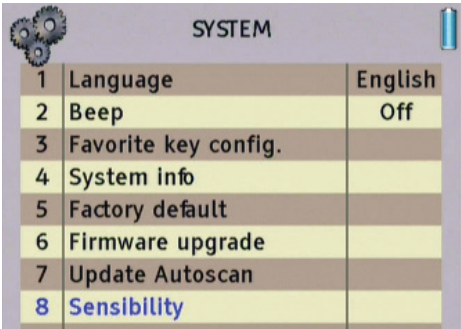

In the sensitivity menu, the next option will appear: In the sensitivity menu, the next option will appear:

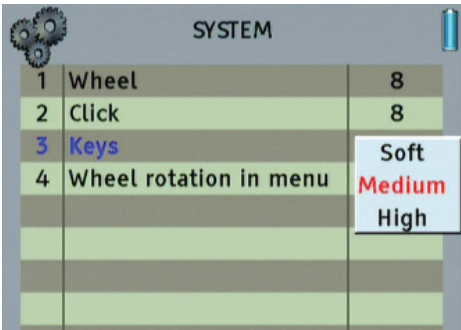

9.6.1 Wheel

It is used for adjusting the turning speed of the wheel. The value that can be chosen is between 1 and 16.

9.6.2 Click

It is used for adjusting the sensitivity of the wheel when you press frontally over it. The value that can be chosen is between 1 and 16.

9.6.3 Keys

Select the sensitivity of the keyboard. You can choose Low, Medium and High sensitivity.

9.6.4 Wheel rotation in menu

The movements in the menus can be done by turning the wheel. You can choose the direction of the turn. The options are: Normal (it moves downwards turning the wheel in counter clockwise) or Inverted (it moves downwards turning the wheel anticlockwise).

## 10 MEASUREMENTS

Some of the parameters while you are measuring are configured independently in each band (ter-sat). These parameters are the following ones: Vrf, 22KHz, DiSEqC switch, Carrier Mode, Spectrum Resolution, Spectrum Detector mode, and Spectrum Span.

The available measurements of **MDL** are the following:

### TERRESTRIAL BAND

MDL 300

MDL 400

MDL 150

MDL 500

#### 1.- Analog signal

1. Level
2. Audio
3. Video / audio difference
4. C/N
5. Video Line

#### 2.- Digital signal

1. Power
2. BER before Viterbi
3. BER after Viterbi
4. Noise Margin
5. C/N (digital measurement)
6. MER
7. Errors

### CABLE BAND

MDL 500

#### 1.- Analog signal

1. Level
2. Audio
3. Video / audio difference
4. C/N

#### 2.- Digital signal

1. Power
2. BER before Viterbi
3. Noise Margin
4. MER
5. Errors

### SATELLITE BAND

MDL 100

MDL 200

MDL 300

MDL 400

MDL 500

#### 1.- Analog signal

1. Level
2. C/N

#### 2.- Digital signal

1. Power
2. BER before Viterbi
3. BER after Viterbi
4. Noise Margin
5. C/N (digital measurement)
6. MER
7. Errors

**Note:** Noise Margin is defined as the difference between the value of the current C/N and the value of the C/N in the pixelation point of the signal. That is, is the quantity of dB's of the C/N measure that is missing until losing the signal.

## 10.1 Terrestrial signal measurement

MDL 300

MDL 400

MDL 150

MDL 500


### 10.1.1 Frequency band selection

It's possible to know if terrestrial band it has been already selected. The status bar represents a logo (different for each band) that allow to know which band has been selected. There are three different options:



1. If logo shows a terrestrial antenna, then terrestrial band is selected.
2. If logo shows a coaxial cable, then cable band is selected.
3. If logo shows a satellite antenna, then satellite band is selected.


The status bar is hidden if only TV mode is selected. To make it appears, press **"tv"** key. For terrestrial band selection, press one or several times **"band"** key until the monitor shows the message "Switching to terrestrial". The switching sequence is the following:

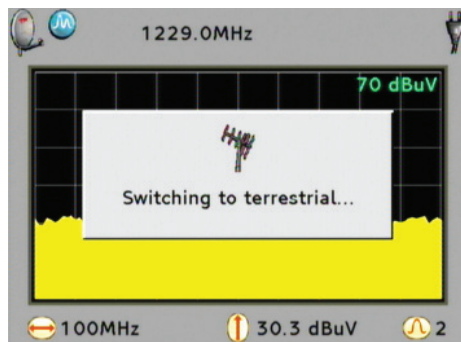

### 10.1.2 Use spectrum mode to spot a signal

To represent the frequency spectrum on the screen and spot a signal, press the **"spectrum"** key.

To identify a signal, to do it with a span of 50 MHz is advised (default value in terrestrial). For select it, use left and right arrows keys. The span current value is shown at the left bottom part of the monitor.

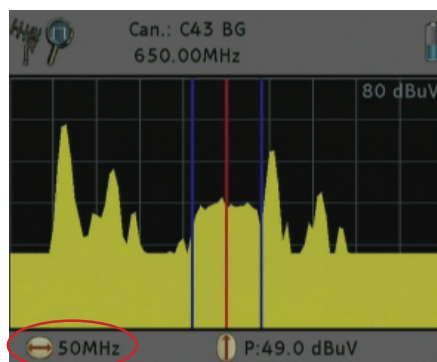


With the spectrum on screen, move the rotary wheel to sweep the frequency band to spot the target signal. In order to simplify the navigation through the terrestrial band, press the “nav” key for select channel mode or frequency mode.

- Channel mode allows to sweep the frequency band by channel defined in the standard
- Frequency mode allows to sweep the band normally by frequency with 50 KHz steps

## 10.1.3 Measurement selection

With the target signal identified, it's necessary to select the signal type (analog or digital). Press “options” key, select “Carrier mode” and there will be two different options:

1. **Analog:** if analog signal
2. **Digital:** if digital signal

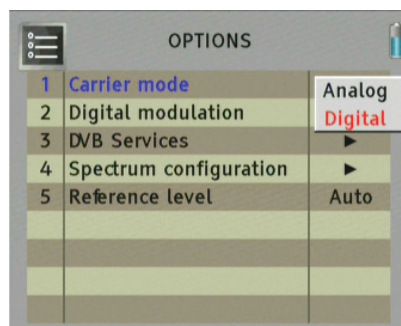

Select one of them and confirm clicking the wheel.



For digital terrestrial television signal, it is necessary setup signal parameters. Select “**Digital modulation**”. The adviced configuration is setup the following options in automatic mode.

- 1. **Mode:** auto
- 2. **Spectrum inversion:** auto
- 3. **Guard interval:** auto
- 4. **Bandwidth:** auto
- 5. **Priority:** high
- 6. **Offset:** auto


1	Mode	Auto
2	Spectrum inversion	Auto
3	Guard interval	Auto
4	Bandwidth	Auto
5	Priority	High
6	Offset	Auto

Press “**back**” key to turn back the main menu.

10.1.4 Make measurements

1.- Analog signals

To get analog terrestrial signal measurements, spot the signal as explained above and press “**meter**” key. The monitor shows a screen with measures values.

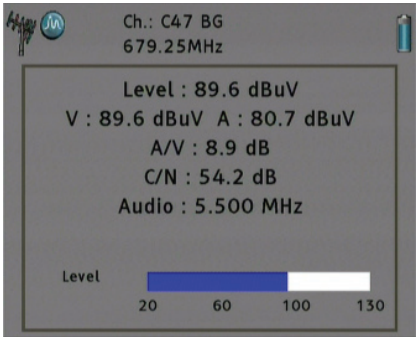


The meter represents the following analog values:

- Level
- Video
- Audio
- Video / audio difference
- C/N

Video Line

In analogue signals, you can overlap to the picture of the tuned channel, the oscillograme of one of the lines of the composed video.

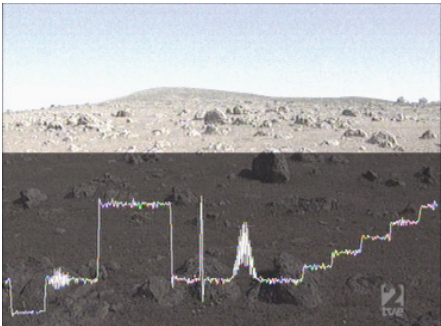


The activation of this feature is carried out from "Video Line Viewing" in the "IMAGE" menu. The line to be showed is selected in the option "Video Line Number" of the same menu.

IMAGE		
1	Brightness	40 %
2	Contrast	50 %
3	Color	50 %
4	Hue	50 %
5	External video	Off
6	Video line	Off
7	Video line number	17

## 2.- Digital signals

To get digital terrestrial signal measurements, spot the signal as explained above and press **"meter"** key. The monitor shows a screen with measures values.

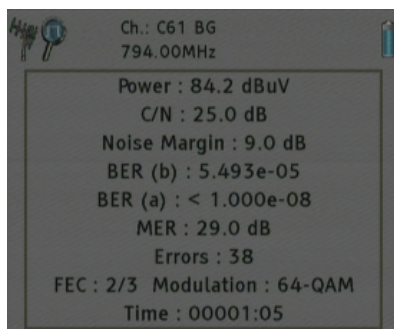

The meter represents the following digital values:


- Power
- BER before Viterbi
- BER after Viterbi
- Noise Margin
- C/N
- MER
- Errors

### 10.1.5 Picture representation

The **MDL** meter is equipped with three different representation modes to show the information on the screen: **"tv"**, **"spectrum"** and **"meter"**.


Representation possibilities are the following:

**1.- "tv" key active.** Activates the TV monitor mode, showing the image of the selected signal. In case of digital carriers, this mode will represent the first program of FTA (free to air) terrestrial multiplex and satellite transponders. If coded signal, the image will not be represented.

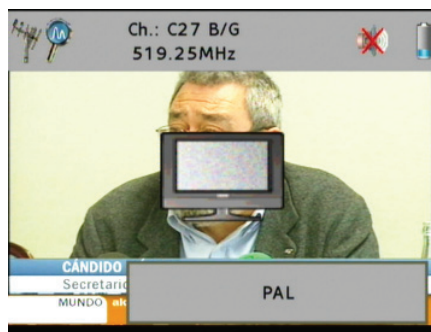


Status bar is present for a short period of time; after it will be hidden. To makes it appear again, press “tv” key.

**2.- “spectrum” key active.** The monitor is divided in three parts: status bar on top, spectrum and at the bottom span and level information.

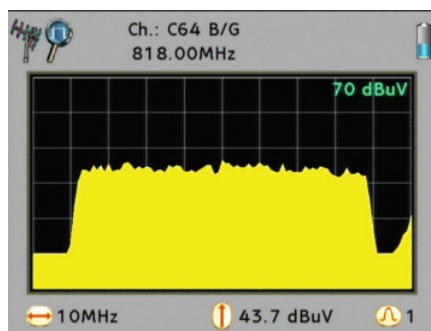

**3.- “meter” key active.** The monitor is divided in two parts: status bar and signal measurements information.

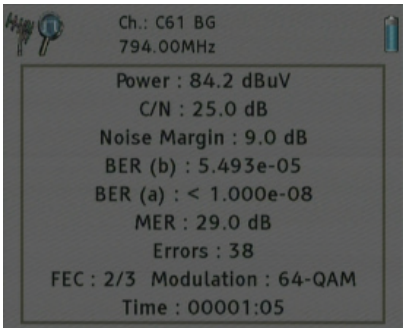

**Note:** With digital signals the quality graphic bar is based on the Noise Margin measure. As long as the Noise Margin measure is equal or higher the maximum value that the meter is able to represent, the bar will be shown in 100%.

## 10.2 Satellite signal measurement

MDL 100

MDL 200



MDL 300

MDL 400

MDL 500

### 10.2.1 Frequency band selection

For satellite band selection, press once the “band” key until the monitor shows the message “Switching to satellite band”. The switching sequence is the following:

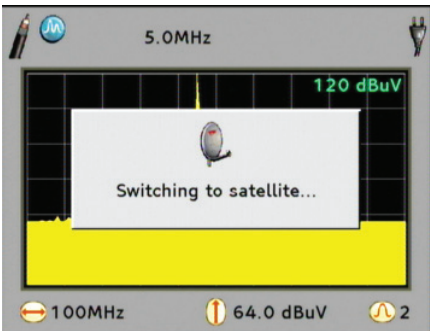


Once this option has been selected, a satellite dish appears on the left top of the status bar.

10.2.2 Supply LNB power

With satellite band it is important supply power to LNB in order to get the signal from the differents satellite band and polarities.

- Polarity. There are two options:
  1. **Vertical:** 13 V
  2. **Horizontal:** 18 V
- Bands. There are two options:
  1. **High:** 22 KHz tone
  2. **Low:** Without tone


To active the LNB power supply, press through RF-IN connector, press "supply" key to open the menu.

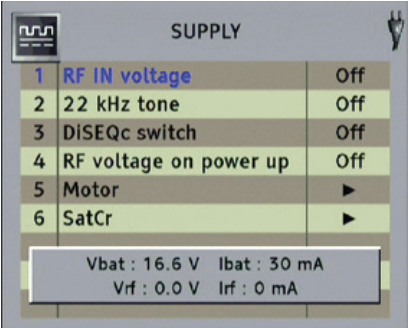

Inside the menu, select "RF IN voltage". It allows to select the following voltage options:


1. Off
2. 5V
3. 13V
4. 18V
5. 24V **MDL 500**

Select the right voltage for the polarity needed and click the wheel to confirm.

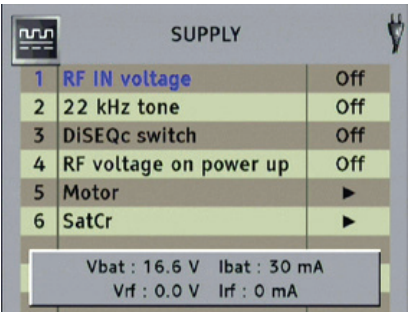


In order to select the high band sending 22 KHz tone, select the option “22 KHz tone”, that represents the following options:

- Off: Without tone
- On: Send 22 KHz to through RF-IN
- Auto: Send 22 KHz in automatic mode if the menu “setup>RF>satellite local oscillator” has been selected KU band or satellite band. The default value of this option is KU band.

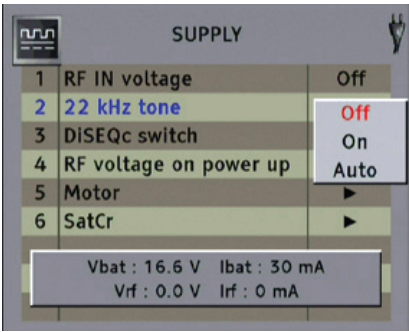

### 10.2.3 Use spectrum mode to spot a signal

To represent the frequency spectrum on the screen and spot a signal, press the “spectrum” key. To identify the target signal, an easy way could be use 100MHz bandwidth span. For select it, use left and right arrows keys. The span current value is shown at the left bottom part of the monitor.

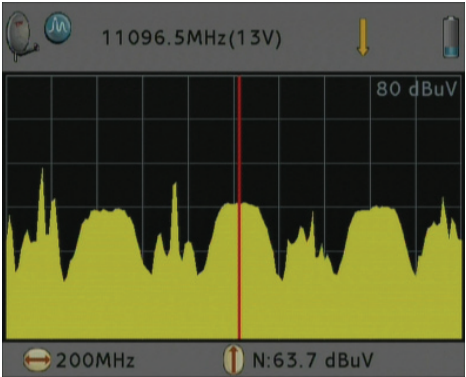


With the spectrum on screen, move the rotary wheel to sweep the frequency band to spot the target signal.

rev 1.2 In satellite band, “nav” key selects only frequency mode to sweep the band normally by frequency with 500 KHz steps.

## 10.2.4 Measurement selection


With the target signal identified, it's necessary to select the signal type (analog or digital). Press **"options"** key, select **"Digital modulation"** and there will be two different options:

- Analog: if analog signal
- Digital: if digital signal

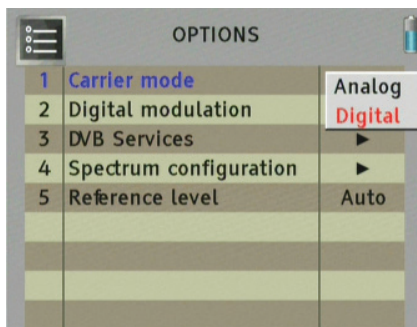

Select one of them and confirm clicking the wheel.

For digital satellite signal, it is necessary to setup signal parameters. Select "Digital modulation". It is necessary to setup symbol rate and mode:

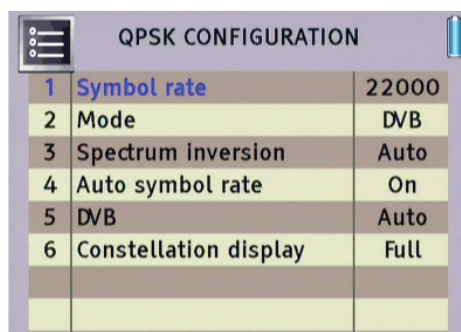

- Symbol rate: This value should be fixed based on broadcaster information
- Mode: DVB, DSS. Normally DVB will be used.
- Spectrum inversion: auto
- Auto symbol rate: You will be able to select if the detection of the Symbol Rate is going to be Automatic (On) or Manual (Off).

- In Manual mode (Off), the value of the Symbol Rate should be fixed by the user based on the provider's information.

- In Automatic mode (On), the meter will automatically identify the SR when a Satellite carrier is tuned. This feature is very useful when the provider's information is unknown.

The SR value found will appear in the field of selection of the SR menu. This value found by the meter could not correspond exactly to the real broadcast SR, but to a very close value.







**NOTE:** The Automatic Symbol Rate feature does not work when the carrier quality is very poor or/and with a very low Power Level.

- DVB: To switch between the modes DVB-S and DVB-S2. MDL 200 MDL 400 MDL 500
- Constellation display: In this option you can choose the type of displaying of the constellation. MDL 200 MDL 400 MDL 500

Pushing on the field "Constellation Display" you can select:

- **Off:** Disables the viewing of the constellation.
- **Full:** Allows watching the 4 parts of the diagram (4 quadrants).
- **1:** Allows watching the first quadrant (higher – left).
- **2:** Allows watching the second quadrant (higher – right).
- **3:** Allows watching the third quadrant (lower – right).
- **4:** Allows watching the fourth quadrant (lower – left).

Once selected the quadrant to be represented, exit of the menu, and select the **"meter"** mode to be able to see the constellation on the TFT monitor.

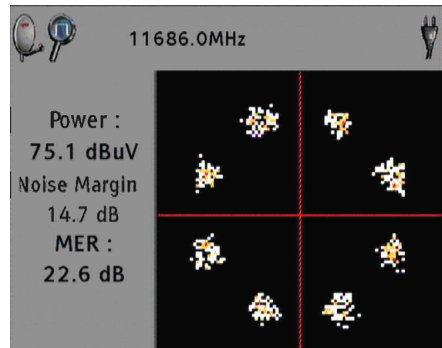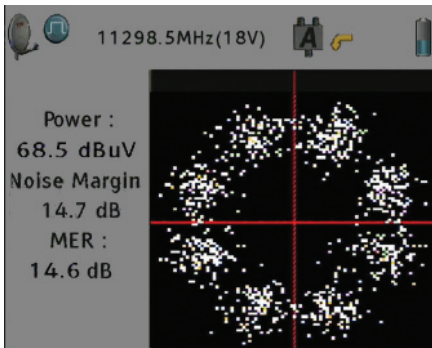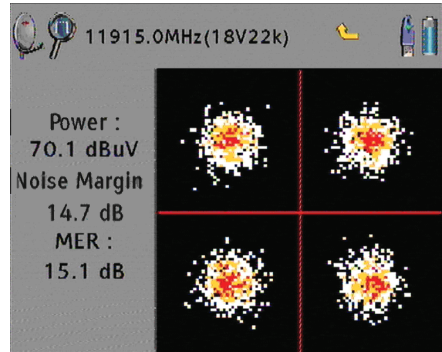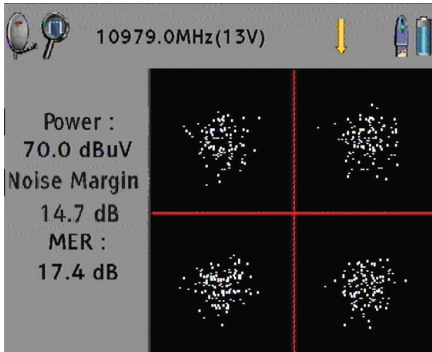


Press “**back**” key to turn back the main menu.

## 10.2.5 Make measurements

### 1.- Analog signals

To get analog satellite signal measurements, spot the signal as explained above and press “**meter**” Key. The status bar will show an analog carrier.

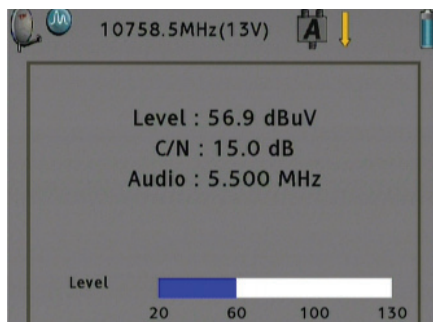


The meter represents the following analog values:

- Level
- C/N

### 2.- Digital signals

To get digital satellite signal measurements, spot the signal as explained above and press “**meter**” Key. The status bar will show a digital carrier.

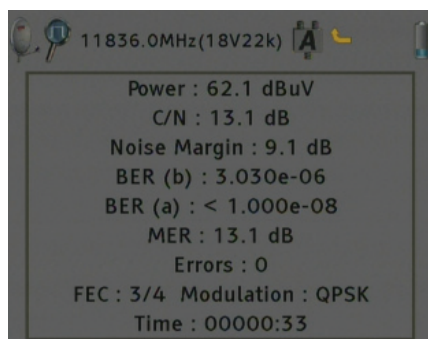

The meter represents the following digital values:


- Power
- BER before Viterbi
- BER after Viterbi
- Noise Margin
- C/N
- MER
- Errors

## 10.2.6 Picture representation

The **MDL** meter is equipped with three different representation modes to show the information on the screen: **"tv"**, **"spectrum"** and **"meter"**.

Representation possibilities are the following:

**1.- "tv" key active.** Activates the TV monitor mode, showing the image of the selected signal. In case of digital carriers, this mode will represent the first program of FTA (free to air) terrestrial multiplex and satellite transponders. If coded signal, the image will not be represented.

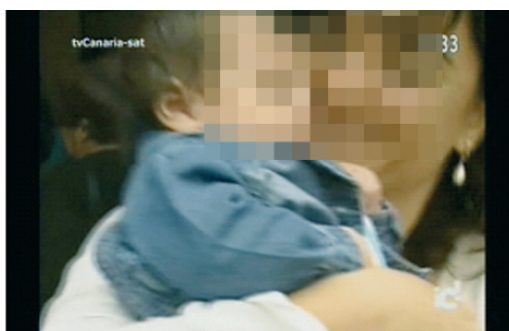


Status bar is present for a short period of time; after it will be hidden. To make it appear again, press **"tv"** key.

**2.- "spectrum" key active.** The monitor is divided in three parts: status bar on top, spectrum and at the bottom span and level information.



3.- “meter” key active. The monitor is divided in two parts: status bar and signal measurements information.

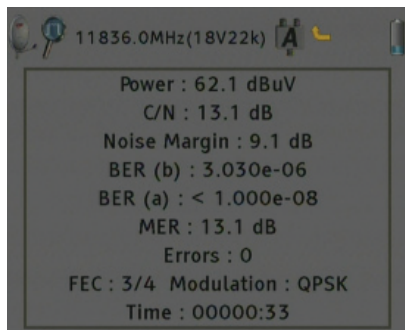


**Note:** With digital signals the quality graphic bar is based on the Noise Margin measure. As long as the Noise Margin measure is equal or higher the maximum value that the meter is able to represent, the bar will be shown in 100%.

## 10.2.7 DiSEqC switch

When DiSEqC satellite switches are installed, it's necessary to use commands according this standard to get the signal from satellite LNB.

If the meter detects that the cable has been disconnected and connected again, resend the DiSEqC information to select the correct switch.

The **MDL** is equipped with an option inside the menu “supply” that allow to send these commands.

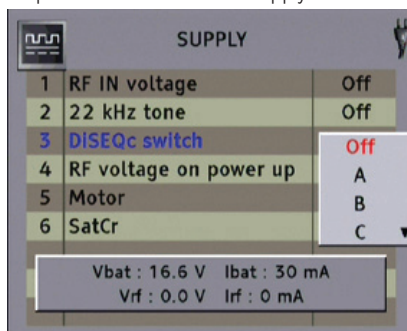


Press “supply” key and select “DiSEqC switch” option. It will show the following options:

- Off: No active
- A: Select switch A
- B: Select switch B
- C: Select switch C
- D: Select switch D

## 10.2.8 Motor Control

Using the **DiSeqC 1.2** commands, it is possible to control one motorized positioner.


To use it, it is necessary that you select the Satellite Band in the meter, and activate the feeding of the LNB, needed for the motor.

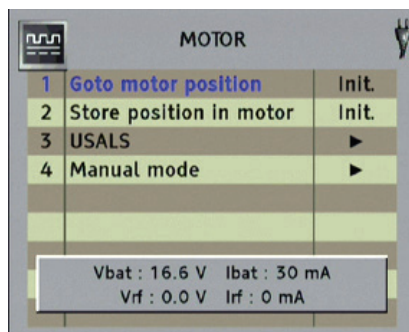


The first option of the menu allows the positioning of the antenna at any of the positions fixed in the memory of the motor. When you activate it, the concerning DiSeqC command is sent to the motor.

With the option 2, we can save the current position of the motor at any empty space of its internal memory.

The option 3 gathers the options of the **USALS** system (Universal Satellites Automatic Location System). In this case, after giving the current latitude and longitude data, the motor will be able to calculate the correct position of the satellites gotten in their internal list. To adjust it, you just need to direct the antenna towards any known satellite, which will be the reference.

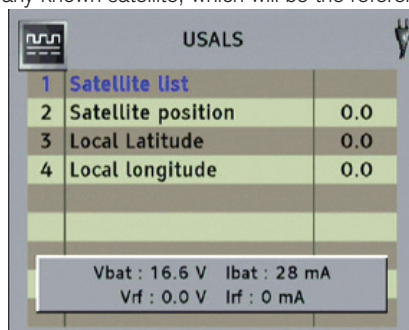


The **manual mode** (option 4 of the MOTOR menu) allows the simple control of the turning of the positioner.

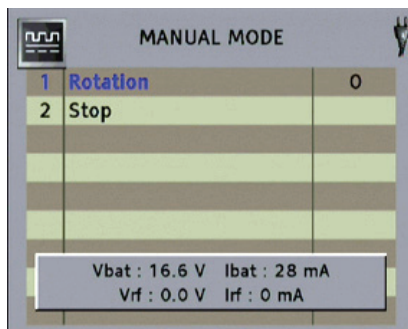

The **Rotation** value indicates the number of motor steps to be turned, towards East if the value is positive, or towards West if it is negative. In our motor **DiMo 120**, each step of the motor is equivalent to a 1/10 of degree.

A Zero value indicates a constant turning to East or West, stopping when you push Enter again.

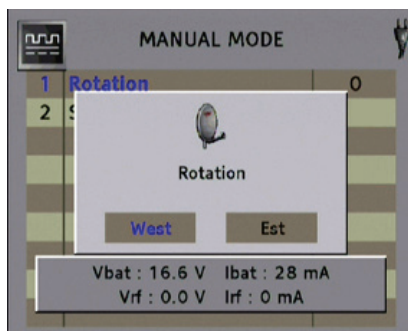


## 10.2.9 SatCR (satellite channel router) - Unicable

SatCR or Unicable is an extension of the protocol DiSEqC oriented to control the LNB, allowing to combine and distribute up to 8 different input signals.

Through one single coaxial cable, it is possible to bring the signal, from 1 or more dishes, to 8 different receivers. For example, applied to PVRs with twin tuner, it allows watching one channel meanwhile another one is recorded without the necessity of distributing 2 cables from the LNB to the receiver.

One device SatCR works shifting the frequency of the input signal to another fixed intermediate frequency, generating a narrow output sub band which will be called “pilot”. Combining different SatCR devices, these pilots, which can belong to different LNB, with different polarizations, can be multiplexed and distributed through one single cable.

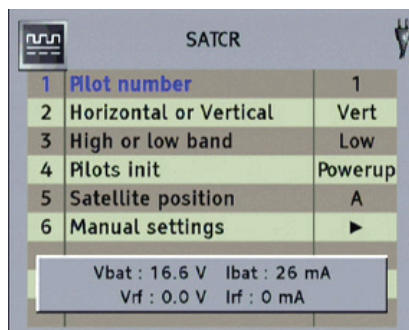


The option **"Pilot number"** allows selecting some of the available pilots.

Through the **options 2 and 3**, we will select the polarity and band of the transponder we want to associate with the selected pilot.

The option **"Initialize pilots"** allows defining when the information exchange will happen (information between LNB and the meter, being their option **Never, Always** and **Start**). In this exchange, the LNB informs about its basic features, like the number and frequency of the used pilots. In case of one intermediate switch, the **option 5** allows selecting one of their positions.

Finally, the **option 6** allows adjusting the rest of parameters in each one of the 8 possible pilots.

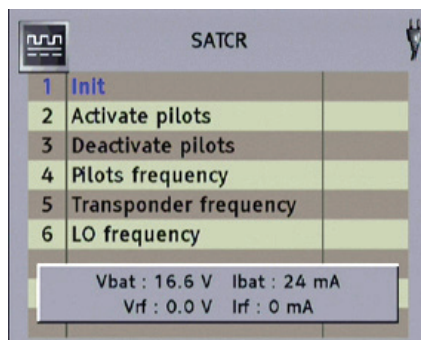

The option **"Init"** forces the starting of the identification of performance of the LNB previously explained.


The **options 2 and 3** allow selecting the active pilots.

In the **option 5** we will select the frequency of the transponder that we want to transmit through the selected pilot.

In the **option 6**, we should fix the frequencies of the Local Oscillator which corresponds to the connected LNB.

## Navigation Mode in SatCR



Through the key **"nav"** we accede to different types of navigation through the spectrum. If we select **"SatCR Mode"**, when we turn the rotary key, we are actuating over the transponder frequency associated to the active pilot. The band identifier of the top-left part will change to indicate this mode.

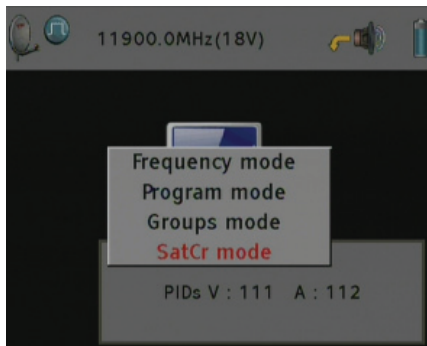

## 10.3 Cable signal measurement MDL 500

### 10.3.1 Frequency band selection

For cable band selection, press one or several times **"band"** key until the monitor shows the message **"Switching to satellite band"**. The switching sequence is the following:

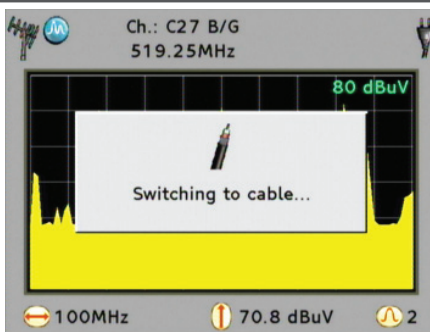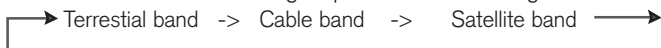

Once this option has been selected, a cable logo appears on the left top of the status bar.

In case of the meter doesn't show the above message, it could be necessary to go into the **"setup"** menu, select **"RF"** option and active **"show cable band"**.




### 10.3.2 Use spectrum mode to spot a signal

To represent the frequency spectrum on the screen and spot a signal, press the **"spectrum"** key. When this selection is active, the green led over the key will be switched on.

To identify a signal, to do it with a span of 50 MHz is advised (default value in cable). For select it, use left and right arrows keys. The span current value is shown at the left bottom part of the monitor.

With the spectrum on screen, move the rotary wheel to sweep the frequency band to spot the target signal. If only spectrum is needed on the monitor, press the button **"spectrum"** to active it.

In cable band, **"nav"** key selects only frequency mode to sweep the band normally by frequency with 100 KHz steps.

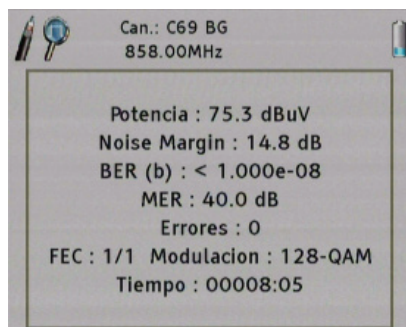

### 10.3.3 Measurement selection

With the target signal identified, it's necessary to select the signal type (analog or digital). Press **"options"** key, select **"Carrier mode"** and there will be two different options:

- Analog: if analog signal
- Digital: if digital signal

Select one of them and confirm clicking the wheel.

QAM CONFIGURATION		
1	Symbol rate	6875
2	Spectrum inversion	Auto
3	Constellation	32
4	Constellation display	Off

For digital cable signal, it is necessary setup signal parameters. Select "Digital modulation". It is necessary to setup the following parameters:

- 1. Symbol rate:** This parameter should be fixed according to the Bit Rate (symbol rate) of the channel, data which is supplied by the operator.
- 2. Spectrum inversion:** Pushing on this field, you can see the following options:
  - Auto: Enables the automatic way of spectrum inversion.
  - On: Enables the manual way of spectrum inversion.
  - Off: Disables the manual spectrum inversion.

You should enabled in case it is necessary to invert the spectrum. If you select incorrectly the inversion of the spectrum, the reception will be not correct.
- 3. Constellation:** This parameter will be fixed according to the modulation of the channel. This data is supplied by the operator of the channel. You can select different constellations (modulations): 16-QAM, 32-QAM, 64-QAM, 128-QAM y 256-QAM.
- 4. Show the Constellation:** In this option you can choose the type of displaying of the constellation. Pushing on the field "Constellation Display" you can select:
  - **Off:** Disables the viewing of the constellation.
  - **Full:** Allows watching the 4 parts of the diagram (4 quadrants).
  - **1:** Allows watching the first quadrant (higher – left).
  - **2:** Allows watching the second quadrant (higher – right).
  - **3:** Allows watching the third quadrant (lower – right).
  - **4:** Allows watching the forth quadrant (lower – left).

Once selected the quadrant to be represented, exit of the menu, and select the “meter” mode to be able to see the constellation on the TFT monitor.




### 10.3.4 Make measurements

#### 1.- Analog signals

To get analog cable signal measurements, spot the signal as explained above and press “meter” key. It switches on the led over the key and the monitor and the monitor shows a screen with measures values.


The meter represents the following analog values:

- Level
- Video
- Audio
- Video / audio difference
- C/N

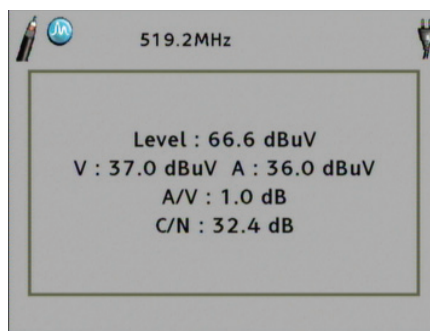

## 2.- Digital signals

To get digital cable signal measurements, spot the signal as explained above and press "meter" key. It switches on the led over the key and the monitor and the monitor shows a screen with measures values.

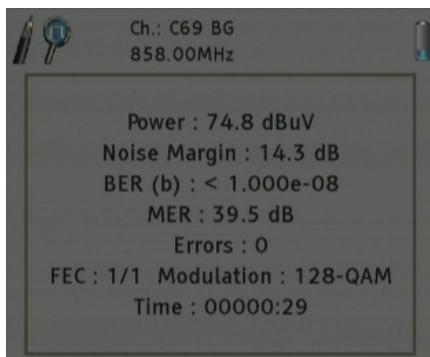

The meter represents the following digital values:

- Power
- Noise Margin
- BER before Viterbi
- MER
- Errors

### 10.3.5 Picture representation

The **MDL** meter is equipped with three different representation modes to show the information on the screen: "**tv**", "**spectrum**" and "**meter**".


Representation possibilities are the following:

**1.- "tv" key active.** Activates the TV monitor mode, showing the image of the selected signal. In case of digital carriers, this mode will represent the first program of FTA (free to air) terrestrial multiplex and satellite transponders. If coded signal, the image will not be represented.




Status bar is present for a short period of time; after it will be hidden. To make it appear again, press "tv" key.

**2.- "spectrum" key active.** The monitor is divided in three parts: status bar on top, spectrum and at the bottom span and level information.

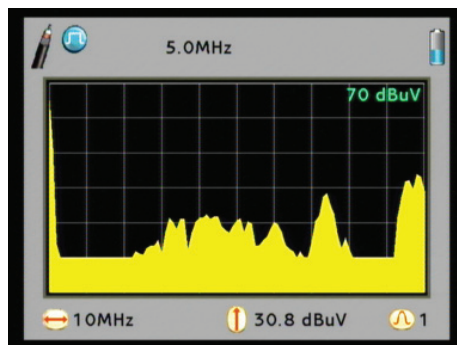

**3.- “meter” key active.** The monitor is divided in two parts: status bar and signal measurements information.

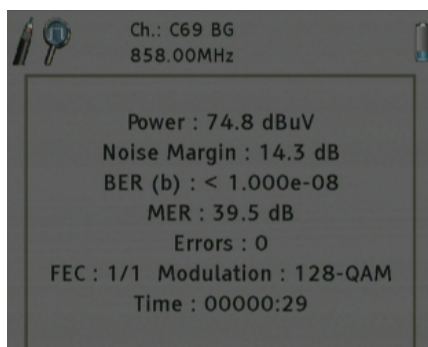

11 PROGRAMS


MDL meter allows to create programs of the different signal that user is analyzing and measuring. One program will store several information as current meter status, frequency, screen mode, spectrum, measurement, image, selected signal mode and supply mode if exists. In order to select program as navigation mode, it's important that at least one program it's created before.

11.1 Edit programs

To create a program MDL meter, select program menu by pressing “programs” key. Possible options are hereafter explained:

11.1.1 Create program


This option will allow to create a new program.

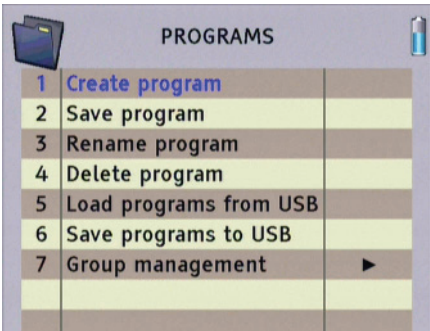


Once this option has been selected, a new OSD window will open with “Create new program” and in blue color the text “Enter name”. Press click wheel or enter key to begin the edition.



If analog signal is selected, the name of the program should be completely written. To enter letters and numbers, press “abc/123” key for alphanumerics. It's possible to delete wrong letters using left arrow key.

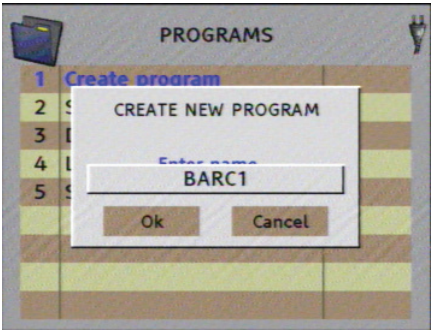


If selected signal is digital, the meter will propose the name of the program based on first current program of digital transponder/multiplex. Anyhow, it's possible to change it using left arrow key.

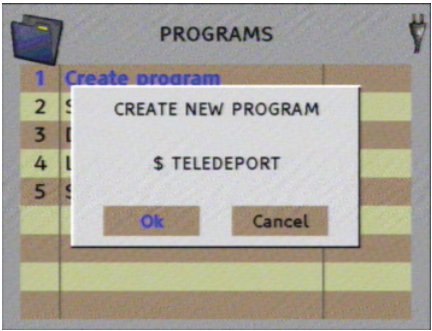

### 11.1.2 Save a program


Selecting this option, the program will be stored. The option does not allow to save modifications on stored programs.

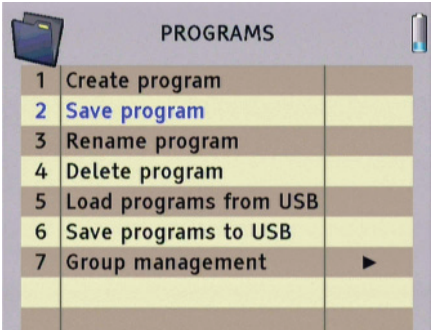



## 11.1.3 Rename a program


This option allows changing the name of an existing program. Turn the wheel and select “**Rename program**” option. A new window with the headline “**Rename program**” will appear.

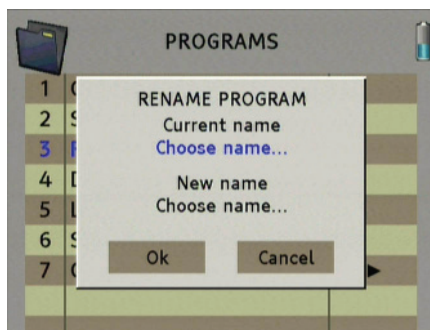

First press “**Choose name**”, this option is just below the line “**Current name**”. A new window with the program list will appear. Turn the wheel until you select the wished program. You will come back to the previous screen and now the name of the program will appear below the line “**Current name**”

Now select the “**Choose name**” option which is just below the line “**New name**”. A small new window where you have to write the new name with the alphanumerical keyboard will appear. The ABC/123 key allows changing from writing numbers (numerical entry) or writing letters (alphabetical entry). The field strength meter is configured in alphabetical mode by default. If there is any mistake, it is possible to remove the last letter by pressing the left arrow from horizontal cursors.

Once the new name is written, press ‘**Enter**’ and turn the wheel in order to select ‘**OK**’ and confirm it to memorize it.

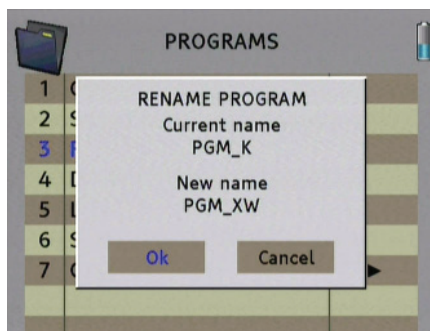


11.1.4 Detele a program

This option allow to delete a stored program. To do it, select the option “Delete program” and confirm with “yes” option.




This option will show a program list alphabetically sorted. Select the program and confirm the action.

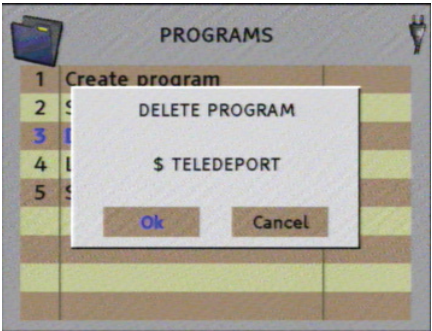


11.1.5 Load program from USB

This option allows to upload a program from USB device. Before use this option, connect USB device. Otherwise meter will show a message asking for it.

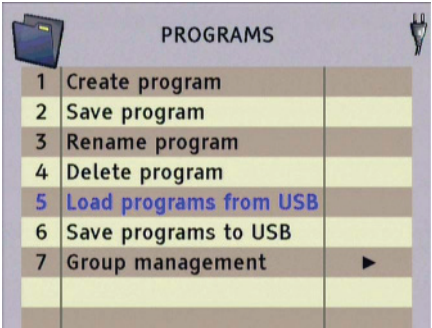

## 11.1.6 Save program to USB

This option allow to create a security copy of programs on USB device.

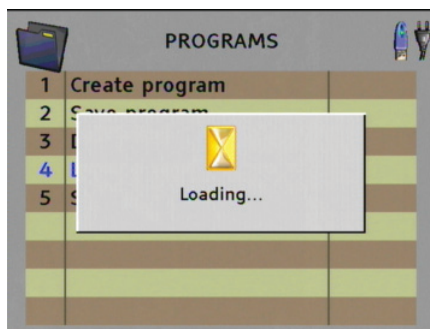


Before to use this option, connect the USB device. Otherwise the meter will show a message asking for it.

## 11.1.7 Group management

From this option you can manage all the groups; this menu is the same as "Groups management" in "Datalogger". Check the "tools"->"Datalogger" section of this user's guide for further information.

## 11.1.8 Navigation by program

If program option is selected in navigation mode, it's possible to sweep the band by program instead of frequency or channel.

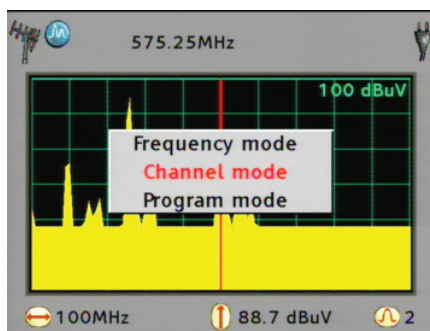


To navigate through differents program, use click wheel. It's possible to select diretly the program pressing "abc/123" key. This option shows the complete current program list.

12 KEY “FAV” FUNCTIONS

The key “fav” on main keypad could be configured by the installer in order to select the most frequently used option. In this way, the user could be able to program this key and simplify the quick access to one function among the possible ones.

12.1 Configuration

To setup this key, press the “setup” key and select “system” option on the menu. In this window, select “fav key setup” and this selection will open another window showing the different options that can be assigned to this key.

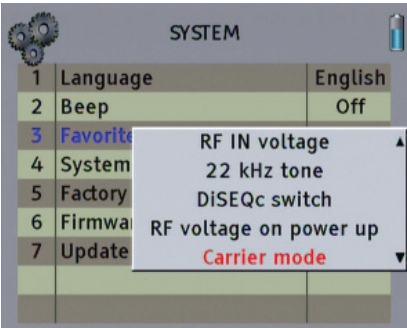

Once the desired option has been selected, press “enter” to confirm.


## 13. AUTOSCAN FUNCTION

This functionality allows tuning the selected carrier automatically, it is, it scans automatically the carrier.

- When a Digital Carrier is detected, automatically it will select the correct parameters for tuning and measuring (as for Terrestrial as well as for Satellite).
- When an Analogue Carrier is detected, it automatically selects the correct modulation standard and the channel will be shown as **"TV"** mode.


To execute this functionality it is recommended to place the meter in **"spectrum"** mode, in order to be able to watch the different carriers.

Navigate through the different carriers using the navigation key, or introducing directly the frequency. Once you are placed on the analogue signal carrier or at the centre of the digital channel, please push the blue key **"autoscan"**. At that moment the meter will test different configurations up to being able to tune correctly the scanned channel.

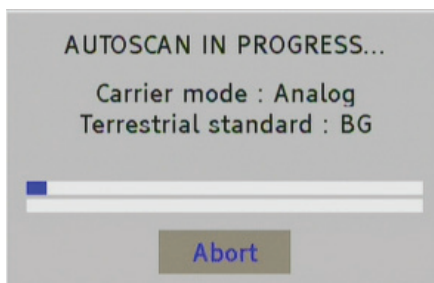


## 14. METER BACKUP

This option allows configuring the following options through the configuration menu:

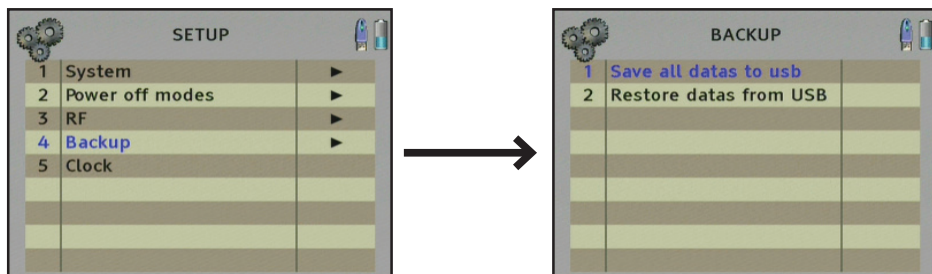

### 14.1. Copy all to usb


Once this option is selected, a dialog box will appear showing the name of the file (in .zip format) with which will be stored into the USB device. The file name has the format /YEAR/MONTH/DAY/HOUR/MINUES/SECONDS.

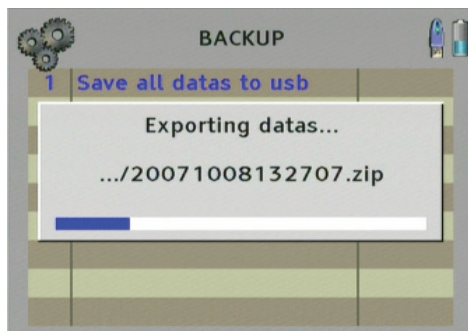

Note: if the .zip file is decompressed, the different files will be classified in different folders depending on the type of file (extension). In this manner, the backup file is organized on Programs, Datalogger, Satellites or Autoscan.

### 14.2. Restore backup from USB

This option allows restoring the meter. There are different options for restoring that we can select through this option (All, Programs, Autoscan, Satellites, and Datalogger). The dialog box of configuration appears for selecting the name of the backup file we want to restore as well as the previous options of restoring:

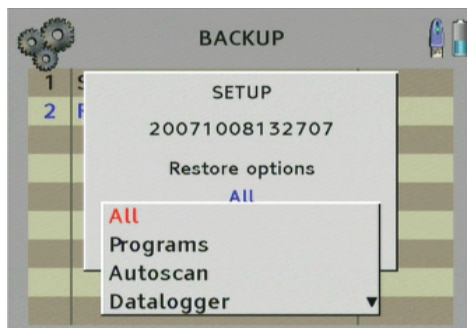

Pushing on the backup, a dialog box opens with the list of available files to be restored:



Push on the name to select the file that you want to restore. Then push on the option "All" to see the available options that you want to restore.

- Restore all: It imports all the files from the backup. If any file from the USB has the same name that another file from the receiver, it will be replaced by the one from the USB.
- Restore Programs: It restores the default program list, from the backup. If any program from the USB has the same name that another program from the receiver, it will be replaced by the one from the USB.
- Restore Autoscan: It imports the tuning configurations of the Autoscan. If any file from the USB has the same name that another file from the receiver, it will be replaced by the one from the USB.
- Restore Satellites: It updates the satellite list for the satellite searcher. If any program from the USB has the same name that another program from the receiver, it will be replaced by the one from the USB.

MDL 100

MDL 200


MDL 300

MDL 400

MDL 500

- Restore Datalogger: It imports the Dataloguer options. If any file from the USB has the same name that another file from the receiver, it will be replaced by the one from the USB.

Push "Yes" for restoring.

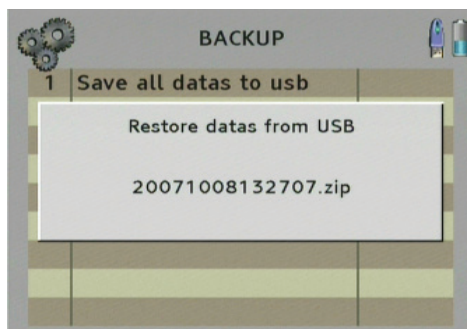




15. CLOCK ADJUSTMENTS

In this menu you can adjust the time of the receiver. In order to access to this menu, pres key 5 "Setup" and select "Clock".

15.1 Time auto-set


In this option you can select the clock in two modes:

- Auto: The field strength meter will adjust the time of the clock when it tunes any digital channel and gets this information.
- Manual: It shows the time that you configure by hand on the section "Time".

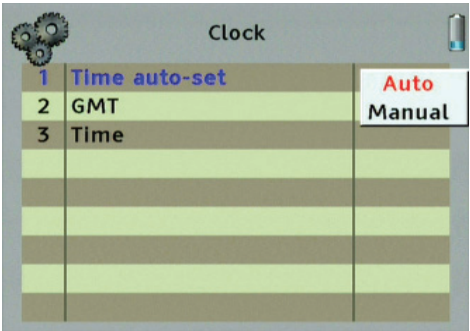


15.2 GMT

Select the different time according to Greenwich time in your local time.

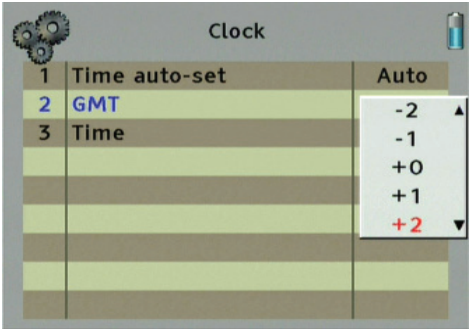

## 15.3 Time

Selecting this option, a new window that allows introducing by hand the time and date will appear.

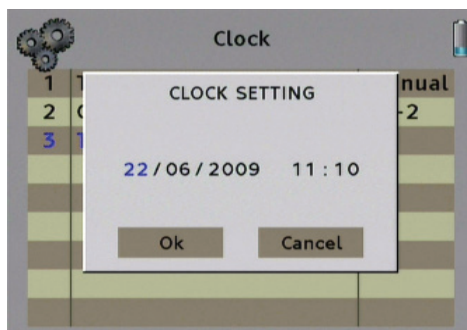


In order to move through all the values (day / month /year / hours / minutes), use the horizontal cursors or turn the wheel.

In order to modify a value, place yourself over it, press the wheel and introduce the value by the means of the numerical keyboard or turning the wheel. Once it is modified, press again over the wheel to save it.


Once date and time are introduced, turn the wheel until selecting **"OK"** to confirm the changes.

16. WAKE UP MENU


In this option, you can configure the alarms so that the meter is powered on automatically at one concrete time.

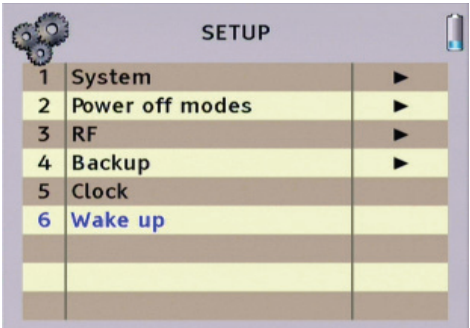

In the activation menu, you can find:

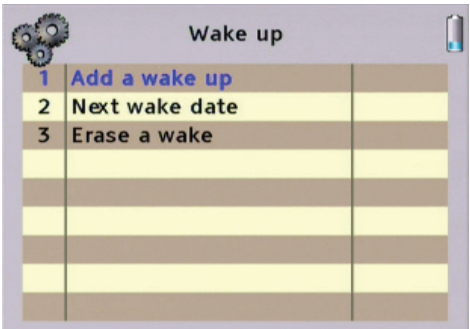


1. Add a wake up: In this option, you can create new alarms of activation of the meter. You can select date and time of power on, as well as the action to be carried out when it powers on (Datalogger or no action).

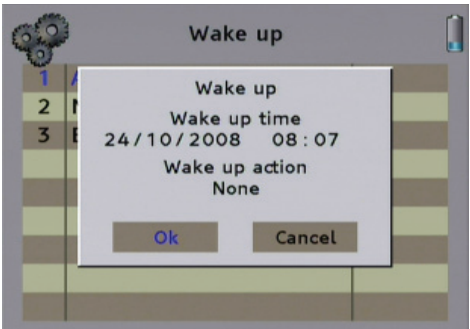

2. Next wake date: In this option, the next alarm will be shown, being able to see the day, time and action to do in the activation of the meter. If no alarm is created, one alert will be shown in the screen.




3. Delete a wake: This option allows deleting existing alarms. When this option is selected, you can select the alarm to be deleted. If no alarm is created, an alert will be shown in the screen.

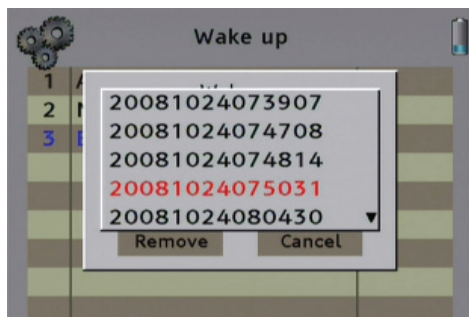

To move through all the options of the menu, you can use the rotary key to change values and confirm.

17. TOOLS

- Datalogger
- Satellite finder MDL 100 MDL 200 MDL 300 MDL 400 MDL 500
- Band Scan MDL 300 MDL 400 MDL 150 MDL 500
- Transmodulators Programming

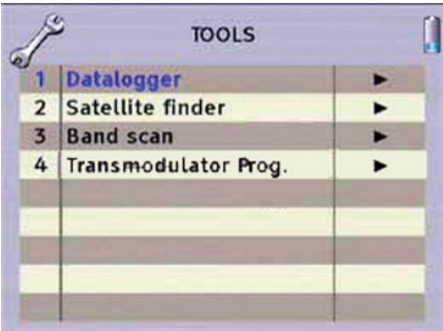


17.1. Datalogger

The Data Logger or data acquire program will allow you to convert your Field Strength Meter MDL in a powerful system to acquire, store and processing data.

Data Logger allows the creation of groups which contain the programs (signals to measure) as well as the measures related to these programs. It also allows the viewing of the measurements (in the same Meter) and exporting the measurements, to be able to read them later, through the Data Logger software in the Computer.

Data Structure in the Field Meter:

The base structure of the Data Logger is the Group of Measures. It will contain the programs which will be used to carry the measures out as well as the stored measures.

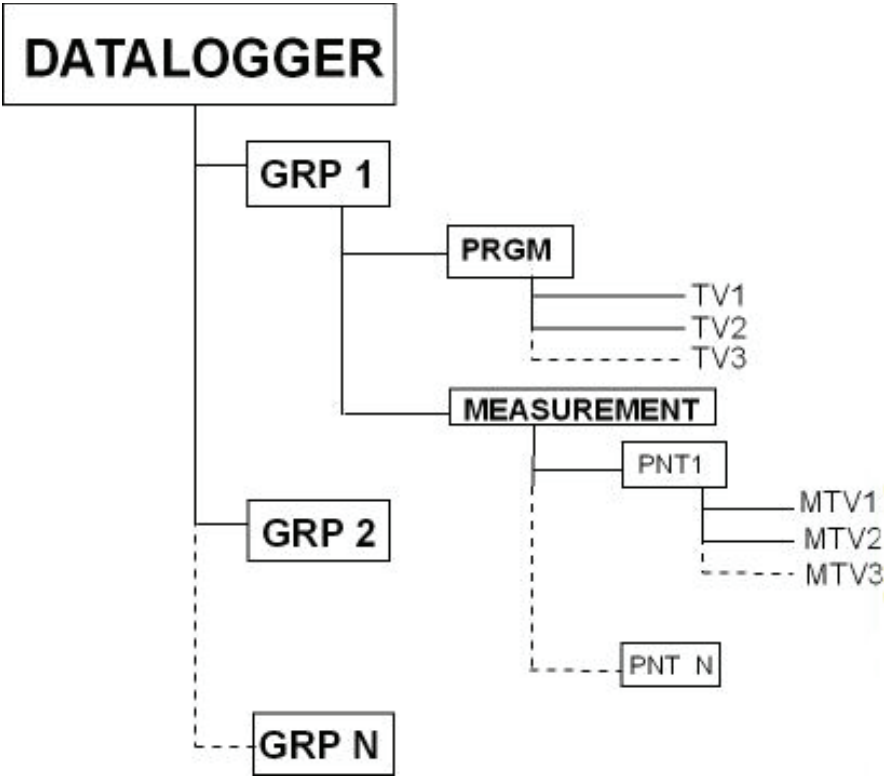


To use the data logger it is needed previously to create the programs (see chapter “Programs”). Once the programs are created, we will group them to begin to use the data logger.  
To access to Data Logger, push the **“tools”** button, and then go to **“Data Logger”** option.




The data logger disposes of the following options:

**17.1.1. New measurement**

This option allows carrying out the measurements of a concrete group.

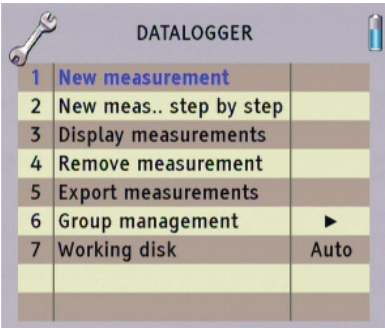


Once it is selected, a dialog box will appear with the text **"New measurement"**. In the field **"Add measurement to the group"** select the name of the group where you want to store the measurement.

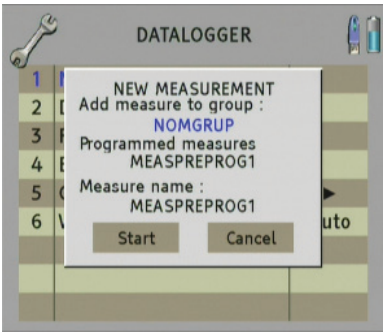

A pre-programmed measurement point is exactly the same to a point of measurement, but it doesn't have any measurement. The advantage is that you will have the name of the measurement point without the need of introducing it into the meter. For creating these pre-programmed measurement points, it is recommended the complete version of Datalogger, which allows creating groups, programs and measurements as well as creating reports.



Push on the blue text of the field "Pre-Programmed measures" and the list for selecting the name of the folder where the measurement configurations will be stored will appears. (Only in case of creating the folder into the USB in the before specified route).

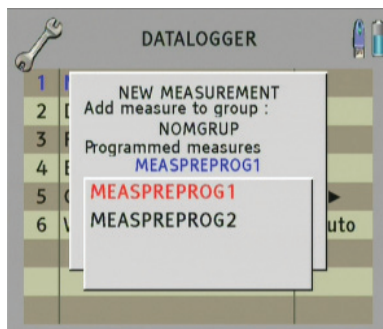

Push “enter” for selecting the name of the folder where all the measurement configurations will be stored.

Note: The field “Pre-programmed measures” can be deleted if you do not want to store the measurements into the USB device. In this case the new measurement will be edited in the field “Name of measure” directly.

Finally select the name of the measurement to carry out in the field “Name of measurement”. Push on the blue text to edit the name and push “enter”.

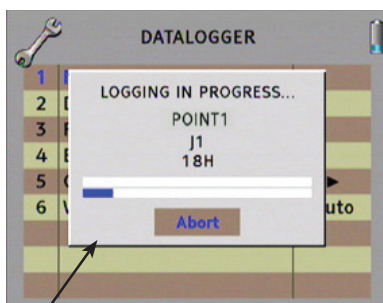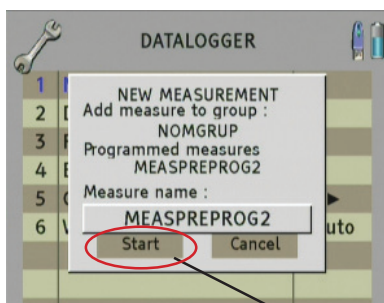

Push “**Start**” to begin with the measurements.

A dialog box will be opened, where you will be able to see the progress of the different programmed measurements that are part of the group. These measurements are stored in the file named previously.


When the measurements are finished, the window of measurements is automatically displayed. In case you change the band, the icon of the band is changed, if you programme to make the pauses between bands or to pause passing to FM.



## 17.1.2. new measurement step by step

This option will allow making the measures of a certain group, stopping at the program while waiting for the confirmation in order to start measuring.

It works the same as explained in the previous point, but before every program to be measured, the field strength meter remains waiting for your confirmation showing you the following screen:

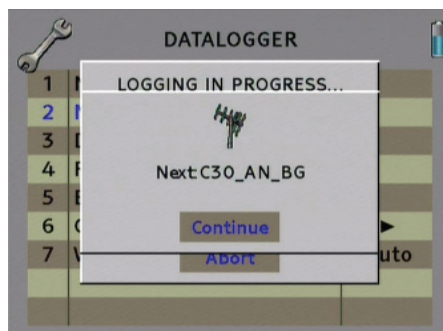


Press the wheel in order to start the measurement each time that the field strength meter requests it, when it is finished, it will show you the measures on the screen.


## 17.1.3. Watching the measures

This option allows us to watch the measures which have been carried out with the **“New measures”** option.

Once selected, a dialog box will be displayed with the text **“Show measure”**, **“group”** below and in blue colour the name of the group where we want to display the measure. We will also have the following fields: **“Measure Point”**, where we will select the name with which the measurement has been stored, just in case that more than one measure has been taken with the same name. In the field **“Measure”** we will select the program that we want to know about and to display the measure.

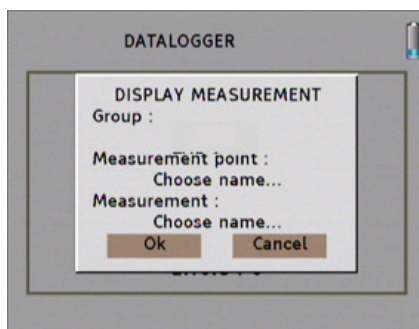

Push **"Yes"** to show. Pushing over the rotary key we come back to the previous menu where we can select different measures as well as show them.

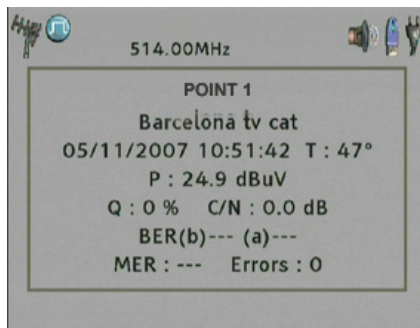


Turning the rotary key to right side we can move from one measure to another one without exiting to the previous menu.


## 17.1.4. Delete measures

This option allows deleting the file with all the measures which have been carried out in a specific group.

Once selected, a dialog box will be displayed with the text **"Delete measure"**, then **"Delete from group"** where we will introduce the name of the group where the measure has been taken, and **"Measurement Point"** where we will place the name of the file with which the measure has been stored. Finally, in the **"Measurement"** field, you should select the program where it has been measured.

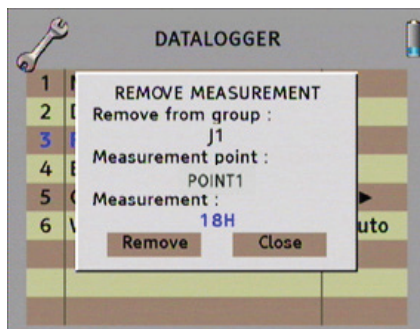

Push **"Delete"** and a confirmation dialog box will be displayed.

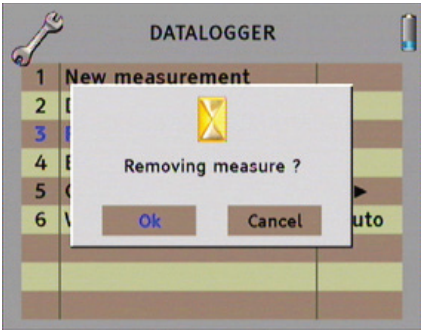


Push **"Yes"** to delete completely the measure and to continue deleting. To exit from the application, push **"Close"**.


**17.1.5. Export measures**

This option allows copying the data stored in the external USB 2.0 storage device.

Once this option has been selected, the current group data (we are working with) will be copied directly to the device.

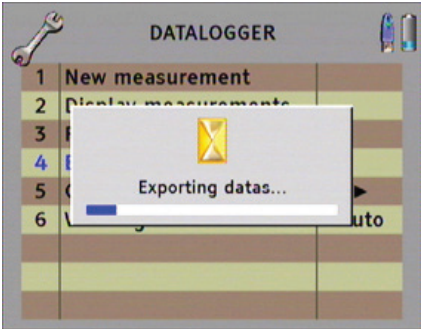


**17.1.6. Group Management**

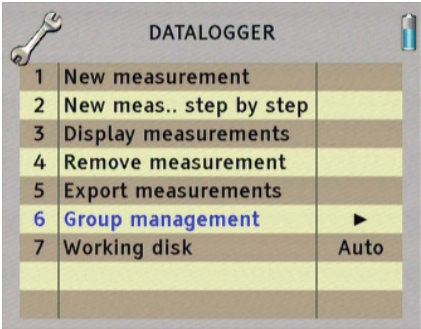

## 17.1.6.1. Creating a group

This option allows creating a new group.

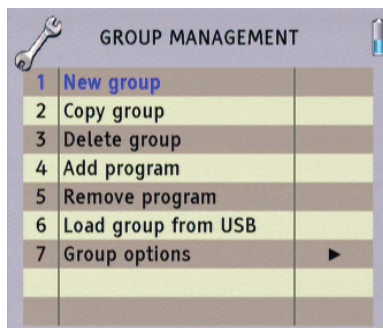

Once selected, a dialog box with the text **"Create a new group"** will be displayed, and in blue colour the text **"Write the name"**. Push the rotating key or the **"enter"** key to begin the edition.




To name the group, please introduce it with the alphanumeric keys of the keyboard.

In case of error, it is possible to delete the last setter by pressing the left arrow of the horizontal cursors. Once the name has been written, please push **enter** and turn the rotating key to right to select "Yes" and confirm to store it.

## 17.1.6.2. Copy a group

This option allows copying the information from one group to another one.

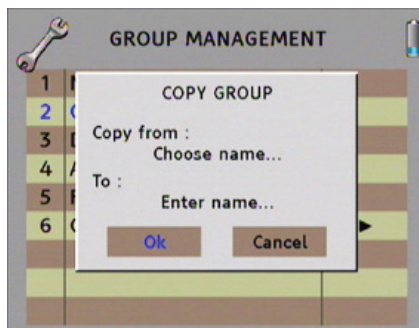


Once selected the option **"Copy Group"**, a dialog box is displayed with the text **"Copy from"** and in blue colour the text **"Write the name"**. Push the rotating key or the **enter** key to select the group you select to copy the information from (it only will be copied the group configuration and the contained programs. The measurements carried out in the origin group will not be copied).

Once selected, please push **enter** and turn the rotating key to right to select **"Yes"** and confirm.

## 17.1.6.3. Delete a group

This option allows deleting a group.

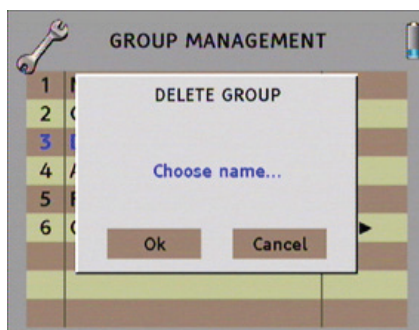


Once the option is selected, a dialog box will appear with the text **"Delete Group"** and in blue colour the text **"Select name"**. Press the rotating key or the **enter** button to select the group you want to delete.




Once the group is selected, please push **enter** button and turn the rotating key to left to select **"Yes"** and confirm to delete it. A dialog box will appear in order to confirm the deleting. Push **"Yes"**.

## 17.1.6.4. Add a program


With this option we will configure our groups with the list of programs which will compose the group. Once the option is selected, a dialog box will appear with the text **"Add program"**. Where we can see the message **"Process Group"**, we should introduce the name of the group where we want to add a new program. Once selected, please push **"enter"**.

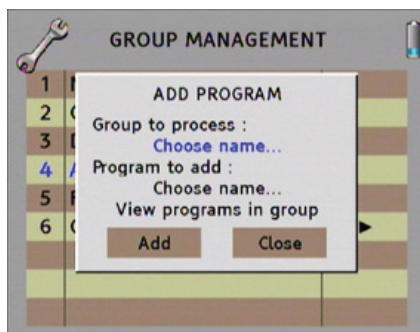

In the following message: **"Add program"** we will select the name of the program that we want to add to the group, which has been previously selected. (Remember that before selecting a group or program, it should be previously created).

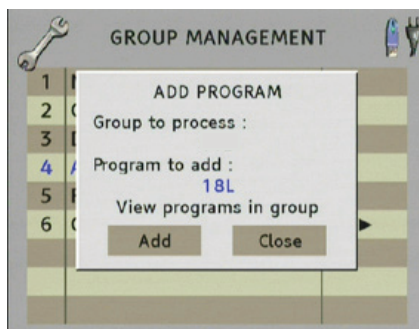

In the dialog box there is a last option **“Watch programs of the group”**. In this mode, we can have a control about the programs that we want to add to the group. In case of duplicated programs, an error message is displayed in order to inform that the current program could not be added.

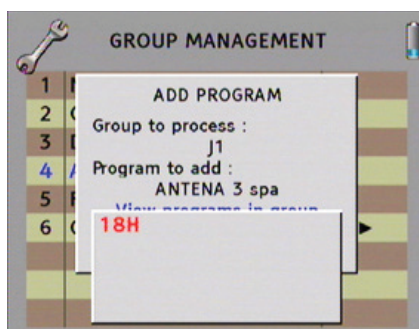


Pressing **“Add”** the program will be inserted into the group we have selected, and the dialog box will keep opened in order to continue adding new programs. To finish the application, please push **“Close”**.


## 17.1.6.5. Delete a program

This option will allow us to delete a program from a specific group.

Once the option is selected, a dialog box will appear with the text **“Delete program”**. Where we can see the message **“Process group”** we should introduce the name of the group where the program we want to delete is placed. Once it is selected, we must push **“enter”**.

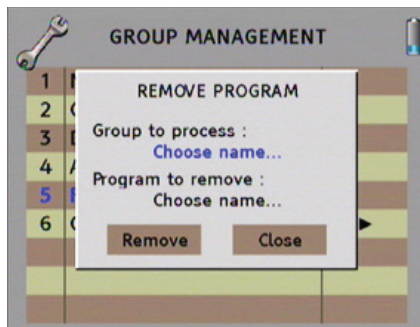

In the following message: **“Delete group”**, please select the name of the program that you want to delete. Pushing the **“Delete”** button an additional dialog box will be displayed to confirm the deleting of the program.

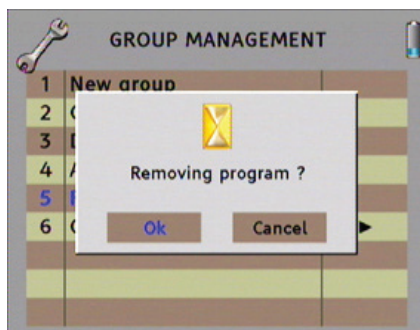

Push **“Yes”**. To finish, please push **“Close”** button.

## 17.1.6.6. Load group from USB

This option allows importing from a USB memory to the field strength meter, except for the measurements made. Before using this option you must connect a USB memory.





17.1.6.7. Group Options

This option allow us to configure all the following options:




1	Group name	M
2	Pause in FM band	Off
3	Pause in band change	Off
4	Measure type	Basic
5	Repetition	0
6	Period (min)	1
7	Timed measure	Now

ENGLISH

17.1.6.7.1.Name of the Group

Once this option is selected, a dialog box will appear with the list of groups created. This option allows selecting the group we want to work with, simply pushing over it.

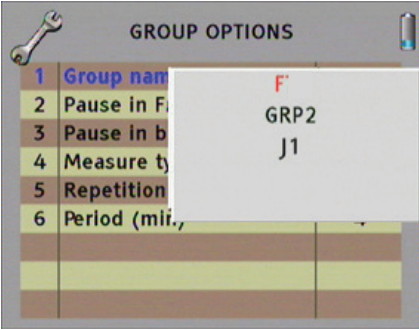

1	Group name	M
2	Pause in FM band	Off
3	Pause in band change	Off
4	Measure type	Basic
5	Repetition	0
6	Period (min)	1
7	Timed measure	Now

F

GRP2

J1

## 17.1.6.7.2. Pause in FM band

MDL 300


MDL 400

MDL 150

MDL 500

This option allows changing the connector we are using for the one of the FM connection where we are carrying measures out, due to the measurement in FM in several times could be made in another connector.


Meanwhile we are making the measure of the group, if the Meter detects a FM program, it would pause the measurement and it would wait up to the confirmation again once the cable has been changed. Once the FM measure is finished and you are in a different measure, the Meter will come back to pause the measurement and wait to the confirmation to continue.

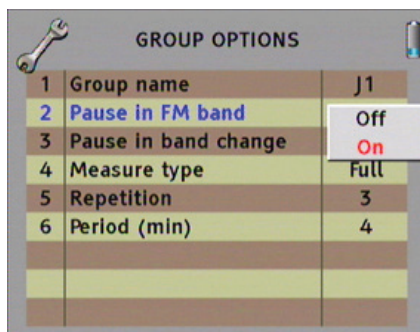

Please, push the rotating key to watch the options and to choose "On" / "Off" according to the kind of measure we are going to make.

## 17.1.6.7.3. Pause in band switching

This option allows changing the connector we are using for another one from another band, as Satellite, Terrestrial, etc. The philosophy is the same as in point 14.5.6.2.

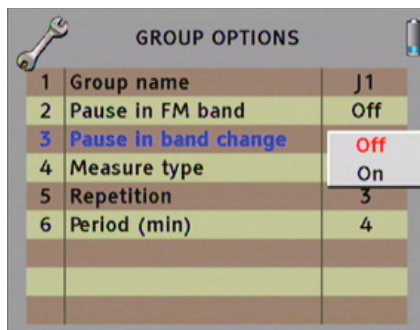

17.1.6.7.4. Kind of measure

MDL 400


MDL 500

This option allows selecting to make a complete measure or a Basic measure.

**Complete:** Depending on the memory where the measures are stored, you can find:


- If it is internal memory:
  - **Analogue measure:** you can store measures, spectrum and line of synchronism (the FM signals do not store the line of synchronism).
  - **Digital measure:** the measures and the spectrum are stored.
- If it is external USB memory:
  - It would be the same case than in the **internal memory**, but in case of TV signal, the picture would be stored as well.

**Basic:** Only the value of the measures will be stored, independently of the kind of storage memory device.

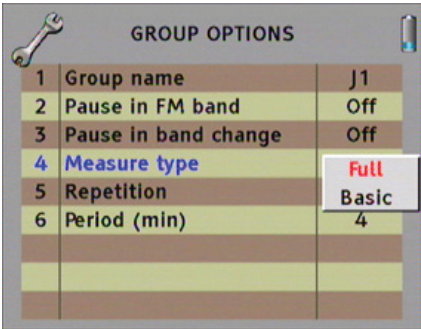


17.1.6.7.5. Repeating

With this option we can select between 1 to 255 values, it is the number of times we want the measure is repeated in order to get more accuracy in the final calculation.

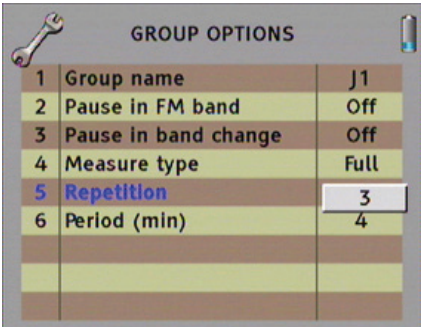

## 17.1.6.7.6. Period

It is the repeating time of the measurement, by default one and it is expressed in minutes. Every time, the measure will be repeated. If we push on the rotating key we can write a value between 1 and 256.

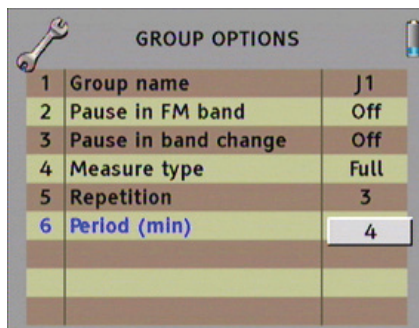


GROUP OPTIONS		
1	Group name	J1
2	Pause in FM band	Off
3	Pause in band change	Off
4	Measure type	Full
5	Repetition	3
6	Period (min)	4


## 17.1.6.7.7. Temporize measurements

This option allows configuring the time to programme a measurement at one specific time.

In case this option is enabled, the option for configuring the time when the new measurement will be carried out will be displayed.

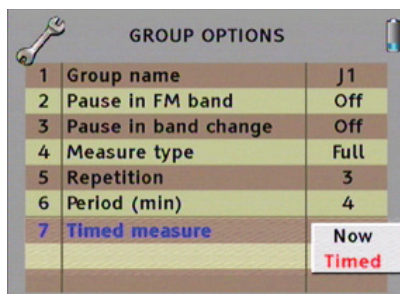

GROUP OPTIONS		
1	Group name	J1
2	Pause in FM band	Off
3	Pause in band change	Off
4	Measure type	Full
5	Repetition	3
6	Period (min)	4
7	Timed measure	Now
		Timed

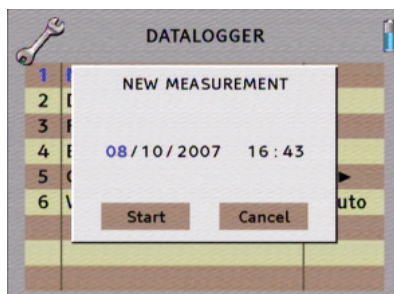

DATALOGGER		
1	NEW MEASUREMENT	
2	08/10/2007 16:43	
3		
4		
5		
6		
	Start	Cancel


## 17.1.7. Working disk

With this option we have the possibility of choosing if we want to work into the internal disk or in the external storage device USB 2.0.

Once the option is selected, a dialog box will appear and we will be able to choose among three different options.

- **Auto:** The Meter decides where the data will be stored. If there is external memory connected, the Meter will store the data in it. If not, it will use the internal memory.
- **USB:** The Meter always will try to use the external memory connected to the USB port. If this memory has not been connected an error message will be shown, reminding that there was an error storing the data and it will be not stored.

- **Internal:** Always the internal memory is used to store the data.

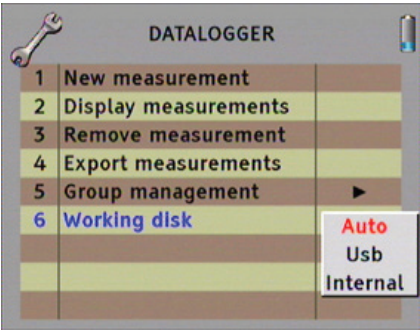

**NOTE:** If the kind of measure of a group is complete and it is selected USB as storage device, the Meter will be able to store a capture of the Picture in JPEG format to be viewed later in the Data Logger software in the computer.

**17.2. Satellite finder**

MDL 100

MDL 200


MDL 300

MDL 400

MDL 500


This tool allows carrying out the following actions:

- 1) Identify the satellite
- 2) Search a satellite
- 3) Configuration of options

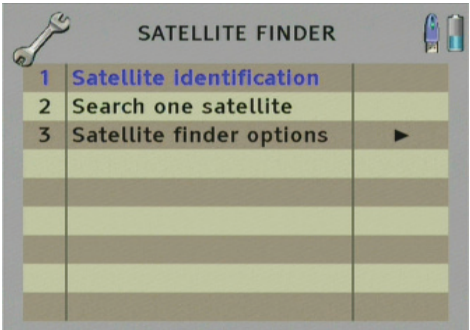

**17.2.1. Identify the satellite**

This option searches based in a list of satellites that the meter has configured and it will identify the satellite that is being tuned. It informs if the satellite is or not locked.

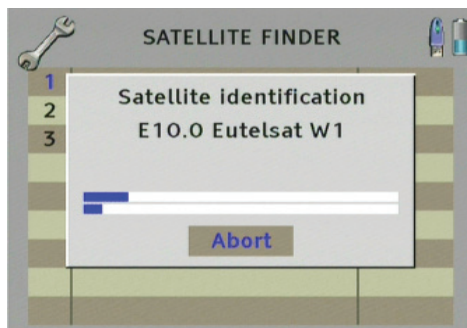

Once the satellite is identified, a message confirming that the satellite has been identified will be displayed.




## 17.2.2 Searching a satellite


This option allows searching a specific satellite placed in the list of satellites the meter has, and to know if it is locked or not. Selecting this option, the following dialog box will appear, in order to select the satellite you want to search.



Depending on if the satellite is locked or not, the following configurations will be shown, indicating: the power level, the DiSEqC switch status as well as the RF input voltage.

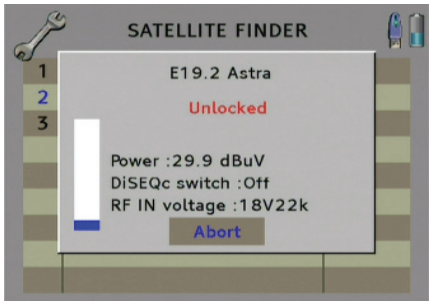

Not locked

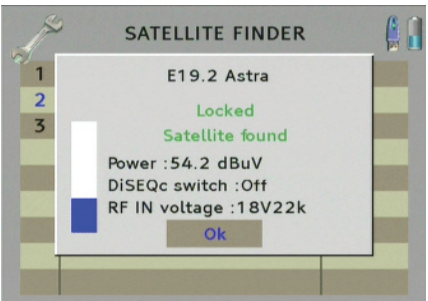


Locked

**17.2.3. Options**

Into this menu, you can configure the following options:

- 1) Add a satellite.
- 2) Delete a satellite.
- 3) Import Satellites.
- 4) Export satellites.
- 5) Show the satellites.
- 6) New parameters Satellite

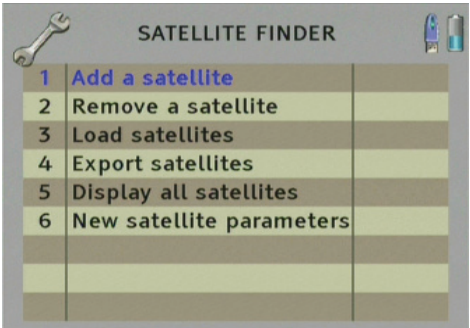


## 17.2.3.1 Add a new satellite

This option allows introducing a new satellite into the list. The following dialog box will be displayed, where a new name for the satellite must be introduced.

Note: In order to it works, the meter should be locked to a digital satellite signal previously.



Push on the blue text "Introduce name" to edit the field:

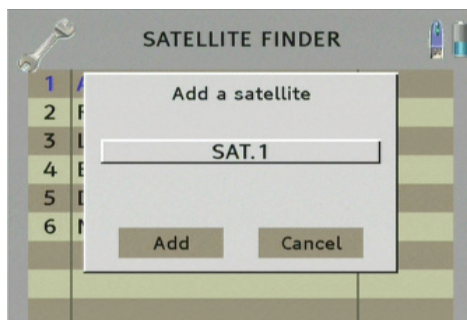


Once the field is edited, push the button "Add".

## 17.2.3.2. Delete satellites

This option allow deleting a satellite previously introduced into the list. Pushing on the blue text, the list of satellites will appear. Select which satellite you want to delete.

Push the "Delete" button and then the key "Yes" in the next dialog box for confirming the deleting of the satellite.



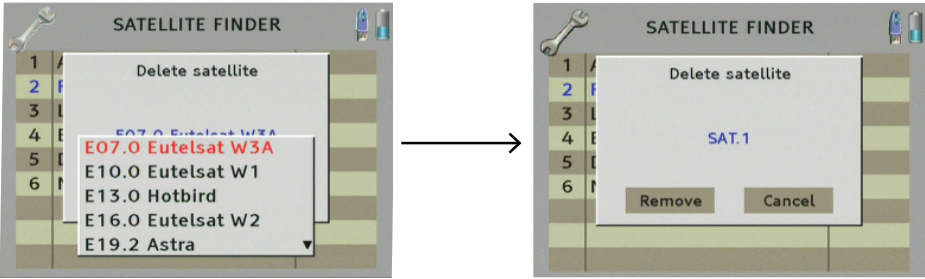


**17.2.3.3. Import satellites**

This option allows importing one satellite list from a USB device. Pushing over this option, the selected file will be loaded for importing the list of satellites from the USB device.




**17.2.3.4. Export satellites**

This option allows saving the configuration of the satellite list into a USB device. Pushing on this option, the last configuration will be saved on this file.

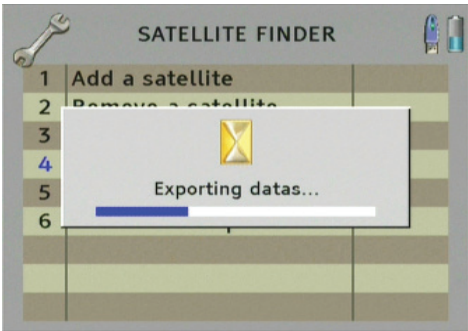

## 17.2.3.5. Show satellites

This option allows showing the list of satellites. Pushing on the blue text, a dialog box will appear with the list of satellites.

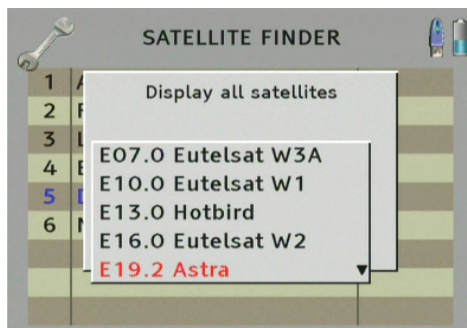


## 17.2.3.6. New satellite parameters

This option allows upgrading the parameters from one specific satellite and overwriting them on the previous data.

Note: The meter must be locked to a digital satellite signal previously in order to make this option work.



Select the satellite to upgrade.

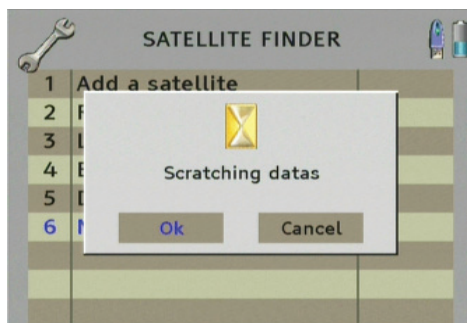

Confirm the upgrading of the data.



17.3. Band scan


MDL 300

MDL 400


MDL 150

MDL 500

It allows us to carry out a complete sweep of the Terrestrial Band and to store the detected TV programs in the band, into a group of measurements.

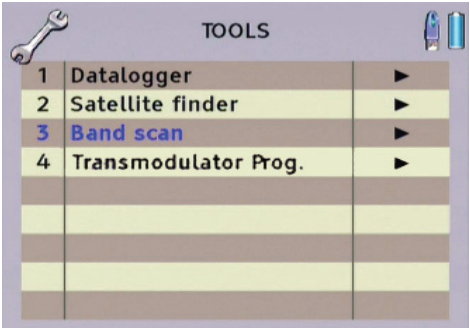

In the Terrestrial Band, go to the tool "Band Scan". You will see the following window:

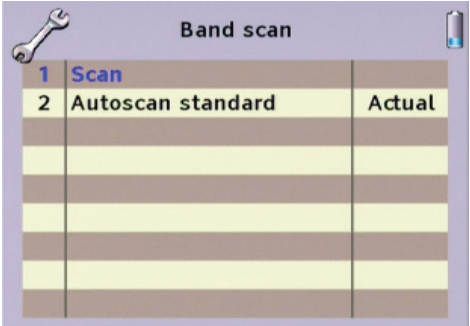

In the option "2. Autoscan Standard" you can select between "Actual" or "All".

- If you select "Actual", the sweep of the entire band will be carried out only with the selected standard in the RF configuration.

- If you select "All", the sweep in the Terrestrial Band is carried out checking out all the standards in the Terrestrial Band. This process will be slower than selecting the Current Standard.

Once the standard is defined, select "1. Scan" and press Ok.




The meter asks about the name of the new group. Once it is introduced, the Band Scan will begin.



17.4 Transmodulators programming


From this tool it is possible to program the transmodulators modules of 100 series

From this menu we can configure the modules, visualize the measurements of the treated signals, read the events log and update the firmware, among other functions

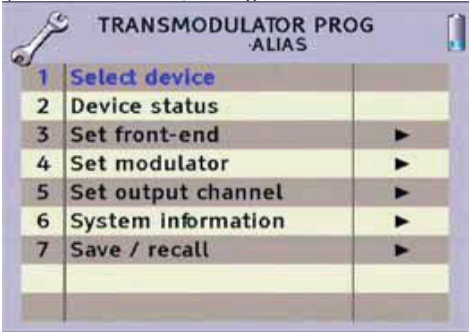

ENGLISH

In order to program the transmodulators we need a DB9 male - RJ-45 cableThe pins connections are the following:

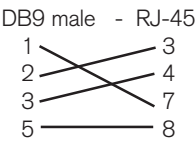

# **ANNEX I**


## **ANKAMET VIEWER**

ANKAMET VIEWER


The viewer of ANKAMET shows the measured data into the Test Equipment and it represents them in this programme.

You will be able to import the data and to store them for processing them later.

Click on the **“File”** menu and select the **“Import”** option. A dialog box named **“Search Folder”** will appear. Select then the folder **“log”** (generated by MDL when is exporting the data into the USB device), and choose **“OK”**.

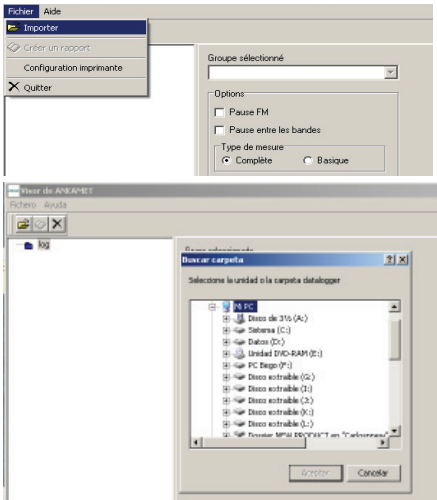

As soon as the measurement data are read from USB, they will be exported with the file structure into the Data Logger Viewer.

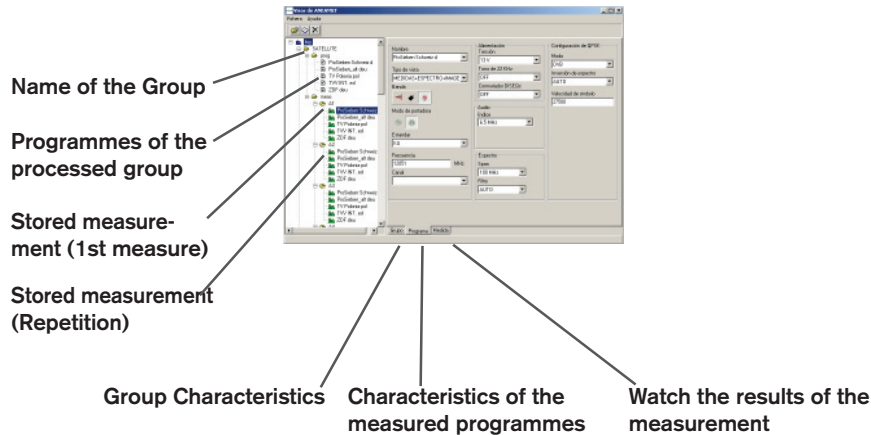


The measured data will be able to be watched and printed out.

For printing select the book symbol button to generate the documents.

In next window you should select the option **“Group of measurement”** that you want to print out.

The field **“information of the report”** can be filled out as you prefer with the data that describe the content of the group (information that will be shown in the first page of the generated report).

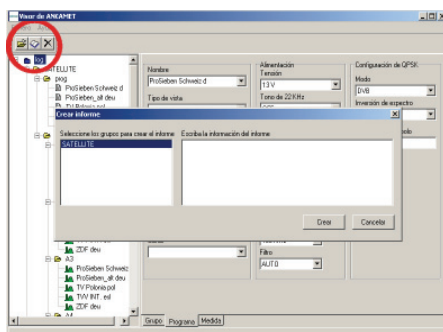

After introducing all the data, confirm them with the button **“Create”**.

In the next window select the output options.


**Type of selected printer**

**Destination printer**

**Destination file**

**File format type**

**Number of copies**

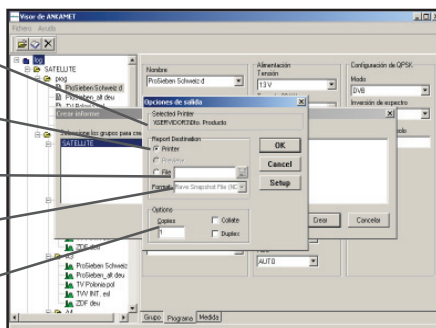

Please, confirm just pressing **OK**.

**NOTE:** In case of exporting files to PDF format, you should add to the file **“.pdf”** manually. For example, if the file is called **“test”**, you should name it **“test.pdf”**



# ANNEX II CHANNELS PLAN FOR

MDL 300

MDL 400

MDL 150

MDL 500

# User's Manual - MDL series

## B/G CCIR STANDARD

ENGLISH

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
E2	48,25	50,50	VHL	S28	359,25	362,00	VHH
E3	55,25	57,50	VHL	S29	367,25	370,00	VHH
E4	62,25	64,50	VHL	S30	375,25	378,00	VHH
				S31	383,25	386,00	VHH
S1	105,25	107,50	VHL	S32	391,25	394,00	VHH
S2	112,25	114,50	VHL	S33	399,25	402,00	VHH
S3	119,25	121,50	VHL	S34	407,25	410,00	VHH
S4	126,25	128,50	VHL	S35	415,25	418,00	VHH
S5	133,25	135,50	VHL	S36	423,25	426,00	UHF
S6	140,25	142,50	VHL	S37	431,25	434,00	UHF
S7	147,25	149,50	VHL	S38	439,25	442,00	UHF
S8	154,25	156,50	VHH	S39	447,25	450,00	UHF
S9	161,25	163,50	VHH	S40	455,25	458,00	UHF
S10	168,25	170,50	VHH	S41	463,25	466,00	UHF
E5	175,25	177,50	VHH	C21	471,25	474,00	UHF
E6	182,25	184,50	VHH	C22	479,25	482,00	UHF
E7	189,25	191,50	VHH	C23	487,25	490,00	UHF
E8	196,25	198,50	VHH	C24	495,25	498,00	UHF
E9	203,25	205,50	VHH	C25	503,25	506,00	UHF
E10	210,25	212,50	VHH	C26	511,25	514,00	UHF
E11	217,25	219,50	VHH	C27	519,25	522,00	UHF
E12	224,25	226,50	VHH	C28	527,25	530,00	UHF
				C29	535,25	538,00	UHF
S11	231,25	233,50	VHH	C30	543,25	546,00	UHF
S12	238,25	240,50	VHH	C31	551,25	554,00	UHF
S13	245,25	247,50	VHH	C32	559,25	562,00	UHF
S14	252,25	254,50	VHH	C33	567,25	570,00	UHF
S15	259,25	261,50	VHH	C34	575,25	578,00	UHF
S16	266,25	268,50	VHH	C35	583,25	586,00	UHF
S17	273,25	275,50	VHH	C36	591,25	594,00	UHF
S18	280,25	282,50	VHH	C37	599,25	602,00	UHF
S19	287,25	289,50	VHH	C38	607,25	610,00	UHF
S20	294,25	296,50	VHH	C39	615,25	618,00	UHF
S21	303,25	306,00	VHH	C40	623,25	626,00	UHF
S22	311,25	314,00	VHH	C41	631,25	634,00	UHF
S23	319,25	322,00	VHH	C42	639,25	642,00	UHF
S24	327,25	330,00	VHH	C43	647,25	650,00	UHF
S25	335,25	338,00	VHH	C44	655,25	658,00	UHF
S26	343,25	346,00	VHH	C45	663,25	666,00	UHF
S27	351,25	354,00	VHH	C46	671,25	674,00	UHF

B/G CCIR STANDARD (CONTINUED)

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
C47	679,25	682,00	UHF
C48	687,25	690,00	UHF
C49	695,25	698,00	UHF
C50	703,25	706,00	UHF
C51	711,25	714,00	UHF
C52	719,25	722,00	UHF
C53	727,25	730,00	UHF
C54	735,25	738,00	UHF
C55	743,25	746,00	UHF
C56	751,25	754,00	UHF
C57	759,25	762,00	UHF
C58	767,25	770,00	UHF
C59	775,25	778,00	UHF
C60	783,25	786,00	UHF
C61	791,25	794,00	UHF
C62	799,25	802,00	UHF
C63	807,25	810,00	UHF
C64	815,25	818,00	UHF
C65	823,25	826,00	UHF
C66	831,25	834,00	UHF
C67	839,25	842,00	UHF
C68	847,25	850,00	UHF
C69	855,25	858,00	UHF

## B/G DE STANDARD

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
E2	48,25	50,50	VHL	S28	359,25	362,00	VHH
E3	55,25	57,50	VHL	S29	367,25	370,00	VHH
E4	62,25	64,50	VHL	S30	375,25	378,00	VHH
				S31	383,25	386,00	VHH
S1	105,25	107,50	VHL	S32	391,25	394,00	VHH
S2	110,75	113,00	VHL	S33	399,25	402,00	VHH
S3	118,75	121,00	VHL	S34	407,25	410,00	VHH
S4	126,25	128,50	VHL	S35	415,25	418,00	VHH
S5	133,25	135,50	VHL	S36	423,25	426,00	UHF
S6	140,25	142,50	VHL	S37	431,25	434,00	UHF
S7	147,25	149,50	VHL	S38	439,25	442,00	UHF
S8	154,25	156,50	VHH	S39	447,25	450,00	UHF
S9	161,25	163,50	VHH	S40	455,25	458,00	UHF
S10	168,25	170,50	VHH	S41	463,25	466,00	UHF
E5	175,25	177,50	VHH	C21	471,25	474,00	UHF
E6	182,25	184,50	VHH	C22	479,25	482,00	UHF
E7	189,25	191,50	VHH	C23	487,25	490,00	UHF
E8	196,25	198,50	VHH	C24	495,25	498,00	UHF
E9	203,25	205,50	VHH	C25	503,25	506,00	UHF
E10	210,25	212,50	VHH	C26	511,25	514,00	UHF
E11	217,25	219,50	VHH	C27	519,25	522,00	UHF
E12	224,25	226,50	VHH	C28	527,25	530,00	UHF
				C29	535,25	538,00	UHF
S11	231,25	233,50	VHH	C30	543,25	546,00	UHF
S12	238,25	240,50	VHH	C31	551,25	554,00	UHF
S13	245,25	247,50	VHH	C32	559,25	562,00	UHF
S14	252,25	254,50	VHH	C33	567,25	570,00	UHF
S15	259,25	261,50	VHH	C34	575,25	578,00	UHF
S16	266,25	268,50	VHH	C35	583,25	586,00	UHF
S17	273,25	275,50	VHH	C36	591,25	594,00	UHF
S18	280,25	282,50	VHH	C37	599,25	602,00	UHF
S19	287,25	289,50	VHH	C38	607,25	610,00	UHF
S20	294,25	296,50	VHH	C39	615,25	618,00	UHF
S21	303,25	306,00	VHH	C40	623,25	626,00	UHF
S22	311,25	314,00	VHH	C41	631,25	634,00	UHF
S23	319,25	322,00	VHH	C42	639,25	642,00	UHF
S24	327,25	330,00	VHH	C43	647,25	650,00	UHF
S25	335,25	338,00	VHH	C44	655,25	658,00	UHF
S26	343,25	346,00	VHH	C45	663,25	666,00	UHF
S27	351,25	354,00	VHH	C46	671,25	674,00	UHF

B/G DE STANDARD (CONTINUED)

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
C47	679,25	682,00	UHF
C48	687,25	690,00	UHF
C49	695,25	698,00	UHF
C50	703,25	706,00	UHF
C51	711,25	714,00	UHF
C52	719,25	722,00	UHF
C53	727,25	730,00	UHF
C54	735,25	738,00	UHF
C55	743,25	746,00	UHF
C56	751,25	754,00	UHF
C57	759,25	762,00	UHF
C58	767,25	770,00	UHF
C59	775,25	778,00	UHF
C60	783,25	786,00	UHF
C61	791,25	794,00	UHF
C62	799,25	802,00	UHF
C63	807,25	810,00	UHF
C64	815,25	818,00	UHF
C65	823,25	826,00	UHF
C66	831,25	834,00	UHF
C67	839,25	842,00	UHF
C68	847,25	850,00	UHF
C69	855,25	858,00	UHF

## B/G IT STANDARD

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
A	53,75	56,00	VHL	S28	359,25	362,00	VHH
B	62,25	64,50	VHL	S29	367,25	370,00	VHH
C	82,25	84,50	VHL	S30	375,25	378,00	VHH
				S31	383,25	386,00	VHH
S1	105,25	107,50	VHL	S32	391,25	394,00	VHH
S2	112,25	114,50	VHL	S33	399,25	402,00	VHH
S3	119,25	121,50	VHL	S34	407,25	410,00	VHH
S4	126,25	128,50	VHL	S35	415,25	418,00	VHH
S5	133,25	135,50	VHL	S36	423,25	426,00	UHF
S6	140,25	142,50	VHL	S37	431,25	434,00	UHF
S7	147,25	149,50	VHL	S38	439,25	442,00	UHF
S8	154,25	156,50	VHH	S39	447,25	450,00	UHF
S9	161,25	163,50	VHH	S40	455,25	458,00	UHF
S10	168,25	170,50	VHH	S41	463,25	466,00	UHF
D	175,25	177,50	VHH	C21	471,25	474,00	UHF
E	183,75	186,00	VHH	C22	479,25	482,00	UHF
F	192,25	194,50	VHH	C23	487,25	490,00	UHF
G	201,25	203,50	VHH	C24	495,25	498,00	UHF
H	210,25	212,50	VHH	C25	503,25	506,00	UHF
H1	217,25	219,50	VHH	C26	511,25	514,00	UHF
H2	224,25	226,50	VHH	C27	519,25	522,00	UHF
				C28	527,25	530,00	UHF
S11	231,25	233,50	VHH	C29	535,25	538,00	UHF
S12	238,25	240,50	VHH	C30	543,25	546,00	UHF
S13	245,25	247,50	VHH	C31	551,25	554,00	UHF
S14	252,25	254,50	VHH	C32	559,25	562,00	UHF
S15	259,25	261,50	VHH	C33	567,25	570,00	UHF
S16	266,25	268,50	VHH	C34	575,25	578,00	UHF
S17	273,25	275,50	VHH	C35	583,25	586,00	UHF
S18	280,25	282,50	VHH	C36	591,25	594,00	UHF
S19	287,25	289,50	VHH	C37	599,25	602,00	UHF
S20	294,25	296,50	VHH	C38	607,25	610,00	UHF
S21	303,25	306,00	VHH	C39	615,25	618,00	UHF
S22	311,25	314,00	VHH	C40	623,25	626,00	UHF
S23	319,25	322,00	VHH	C41	631,25	634,00	UHF
S24	327,25	330,00	VHH	C42	639,25	642,00	UHF
S25	335,25	338,00	VHH	C43	647,25	650,00	UHF
S26	343,25	346,00	VHH	C44	655,25	658,00	UHF
S27	351,25	354,00	VHH	C45	663,25	666,00	UHF

## B/G IT STANDARD (CONTINUED)

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
C46	671,25	674,00	UHF
C47	679,25	682,00	UHF
C48	687,25	690,00	UHF
C49	695,25	698,00	UHF
C50	703,25	706,00	UHF
C51	711,25	714,00	UHF
C52	719,25	722,00	UHF
C53	727,25	730,00	UHF
C54	735,25	738,00	UHF
C55	743,25	746,00	UHF
C56	751,25	754,00	UHF
C57	759,25	762,00	UHF
C58	767,25	770,00	UHF
C59	775,25	778,00	UHF
C60	783,25	786,00	UHF
C61	791,25	794,00	UHF
C62	799,25	802,00	UHF
C63	807,25	810,00	UHF
C64	815,25	818,00	UHF
C65	823,25	826,00	UHF
C66	831,25	834,00	UHF
C67	839,25	842,00	UHF
C68	847,25	850,00	UHF
C69	855,25	858,00	UHF

## L/L' STANDARD

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
5	176,00	178,75	VHH	C42	639,25	642,00	UHF
6	184,00	186,75	VHH	C43	647,25	650,00	UHF
7	192,00	194,75	VHH	C44	655,25	658,00	UHF
8	200,00	202,75	VHH	C45	663,25	666,00	UHF
9	208,00	210,75	VHH	C46	671,25	674,00	UHF
10	216,00	218,75	VHH	C47	679,25	682,00	UHF
				C48	687,25	690,00	UHF
C21	471,25	474,00	UHF	C49	695,25	698,00	UHF
C22	479,25	482,00	UHF	C50	703,25	706,00	UHF
C23	487,25	490,00	UHF	C51	711,25	714,00	UHF
C24	495,25	498,00	UHF	C52	719,25	722,00	UHF
C25	503,25	506,00	UHF	C53	727,25	730,00	UHF
C26	511,25	514,00	UHF	C54	735,25	738,00	UHF
C27	519,25	522,00	UHF	C55	743,25	746,00	UHF
C28	527,25	530,00	UHF	C56	751,25	754,00	UHF
C29	535,25	538,00	UHF	C57	759,25	762,00	UHF
C30	543,25	546,00	UHF	C58	767,25	770,00	UHF
C31	551,25	554,00	UHF	C59	775,25	778,00	UHF
C32	559,25	562,00	UHF	C60	783,25	786,00	UHF
C33	567,25	570,00	UHF	C61	791,25	794,00	UHF
C34	575,25	578,00	UHF	C62	799,25	802,00	UHF
C35	583,25	586,00	UHF	C63	807,25	810,00	UHF
C36	591,25	594,00	UHF	C64	815,25	818,00	UHF
C37	599,25	602,00	UHF	C65	823,25	826,00	UHF
C38	607,25	610,00	UHF	C66	831,25	834,00	UHF
C39	615,25	618,00	UHF	C67	839,25	842,00	UHF
C40	623,25	626,00	UHF	C68	847,25	850,00	UHF
C41	631,25	634,00	UHF	C69	855,25	858,00	UHF



## D/K/K'/DK PAL STANDARD

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
R1	49,75	52,50	VHL	S18	303,25	306,00	VHH
R2	59,25	62,00	VHL	S19	311,25	314,00	VHH
R3	77,25	80,00	VHL	S20	319,25	322,00	VHH
				S21	327,25	330,00	VHH
R4	85,25	88,00	VHL	S22	335,25	338,00	VHH
R5	93,25	96,00	VHL	S23	343,25	346,00	VHH
				S24	351,25	354,00	VHH
S1	111,25	114,00	VHL	S25	359,25	362,00	VHH
S2	119,25	122,00	VHL	S26	367,25	370,00	VHH
S3	127,25	130,00	VHL	S27	375,25	378,00	VHH
S4	135,25	138,00	VHL	S28	383,25	386,00	VHH
S5	143,25	146,00	VHL	S29	391,25	394,00	VHH
S6	151,25	154,00	VHL	S30	399,25	402,00	VHH
S7	159,25	162,00	VHL	S31	407,25	410,00	VHH
S8	167,25	170,00	VHL	S32	415,25	418,00	VHH
				S33	423,25	426,00	VHH
R6	175,25	178,00	VHH	S34	431,25	434,00	UHH
R7	183,25	186,00	VHH	S35	439,25	442,00	UHH
R8	191,25	194,00	VHH	S36	447,25	450,00	UHH
R9	199,25	202,00	VHH	S37	455,25	458,00	UHH
R10	207,25	210,00	VHH	S38	463,25	466	UHH
R11	215,25	218,00	VHH				
R12	223,25	226,00	VHH	C21	471,25	474,00	UHF
				C22	479,25	482,00	UHF
S9	231,25	234,00	VHH	C23	487,25	490,00	UHF
S10	239,25	242,00	VHH	C24	495,25	498,00	UHF
S11	247,25	250,00	VHH	C25	503,25	506,00	UHF
S12	255,25	258,00	VHH	C26	511,25	514,00	UHF
S13	263,25	266,00	VHH	C27	519,25	522,00	UHF
S14	271,25	274,00	VHH	C28	527,25	530,00	UHF
S15	279,25	282,00	VHH	C29	535,25	538,00	UHF
S16	287,25	290,00	VHH	C30	543,25	546,00	UHF
S17	295,25	298,00	VHH	C31	551,25	554,00	UHF

## D/K/K'/DK PAL STANDARD (CONTINUED)

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
C32	559,25	562,00	UHF	C63	807,25	810,00	UHF
C33	567,25	570,00	UHF	C64	815,25	818,00	UHF
C34	575,25	578,00	UHF	C65	823,25	826,00	UHF
C35	583,25	586,00	UHF	C66	831,25	834,00	UHF
C36	591,25	594,00	UHF	C67	839,25	842,00	UHF
C37	599,25	602,00	UHF	C68	847,25	850,00	UHF
C38	607,25	610,00	UHF	C69	855,25	858,00	UHF
C39	615,25	618,00	UHF				
C40	623,25	626,00	UHF				
C41	631,25	634,00	UHF				
C42	639,25	642,00	UHF				
C43	647,25	650,00	UHF				
C44	655,25	658,00	UHF				
C45	663,25	666,00	UHF				
C46	671,25	674,00	UHF				
C47	679,25	682,00	UHF				
C48	687,25	690,00	UHF				
C49	695,25	698,00	UHF				
C50	703,25	706,00	UHF				
C51	711,25	714,00	UHF				
C52	719,25	722,00	UHF				
C53	727,25	730,00	UHF				
C54	735,25	738,00	UHF				
C55	743,25	746,00	UHF				
C56	751,25	754,00	UHF				
C57	759,25	762,00	UHF				
C58	767,25	770,00	UHF				
C59	775,25	778,00	UHF				
C60	783,25	786,00	UHF				
C61	791,25	794,00	UHF				
C62	799,25	802,00	UHF				

## I STANDARD

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
IA	48,75	51,50	VHL	C40	623,25	626,00	UHF
IB	56,75	59,50	VHL	C41	631,25	634,00	UHF
IC	64,75	67,50	VHL	C42	639,25	642,00	UHF
				C43	647,25	650,00	UHF
ID	175,25	178,00	VHH	C44	655,25	658,00	UHF
IE	183,25	186,00	VHH	C45	663,25	666,00	UHF
IF	191,25	194,00	VHH	C46	671,25	674,00	UHF
IG	199,25	202,00	VHH	C47	679,25	682,00	UHF
IH	207,25	210,00	VHH	C48	687,25	690,00	UHF
IJ	215,25	218,00	VHH	C49	695,25	698,00	UHF
				C50	703,25	706,00	UHF
C21	471,25	474,00	UHF	C51	711,25	714,00	UHF
C22	479,25	482,00	UHF	C52	719,25	722,00	UHF
C23	487,25	490,00	UHF	C53	727,25	730,00	UHF
C24	495,25	498,00	UHF	C54	735,25	738,00	UHF
C25	503,25	506,00	UHF	C55	743,25	746,00	UHF
C26	511,25	514,00	UHF	C56	751,25	754,00	UHF
C27	519,25	522,00	UHF	C57	759,25	762,00	UHF
C28	527,25	530,00	UHF	C58	767,25	770,00	UHF
C29	535,25	538,00	UHF	C59	775,25	778,00	UHF
C30	543,25	546,00	UHF	C60	783,25	786,00	UHF
C31	551,25	554,00	UHF	C61	791,25	794,00	UHF
C32	559,25	562,00	UHF	C62	799,25	802,00	UHF
C33	567,25	570,00	UHF	C63	807,25	810,00	UHF
C34	575,25	578,00	UHF	C64	815,25	818,00	UHF
C35	583,25	586,00	UHF	C65	823,25	826,00	UHF
C36	591,25	594,00	UHF	C66	831,25	834,00	UHF
C37	599,25	602,00	UHF	C67	839,25	842,00	UHF
C38	607,25	610,00	UHF	C68	847,25	850,00	UHF
C39	615,25	618,00	UHF	C69	855,25	858,00	UHF

## M/N STANDARD

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
A2	55,25	57,00	VHL	C42	639,25	641,00	UHF
A3	61,25	63,00	VHL	C43	645,25	647,00	UHF
A4	67,25	69,00	VHL	C44	651,25	653,00	UHF
				C45	657,25	659,00	UHF
A5	77,25	79,00	VHL	C46	663,25	665,00	UHF
A6	83,25	85,00	VHL	C47	669,25	671,00	UHF
				C48	675,25	677,00	UHF
A7	175,25	177,00	VHH	C49	681,25	683,00	UHF
A8	181,25	183,00	VHH	C50	687,25	689,00	UHF
A9	187,25	189,00	VHH	C51	693,25	695,00	UHF
A10	193,25	195,00	VHH	C52	699,25	701,00	UHF
A11	199,25	201,00	VHH	C53	705,25	707,00	UHF
A12	205,25	207,00	VHH	C54	711,25	713,00	UHF
A13	211,25	213,00	VHH	C55	717,25	719,00	UHF
C14	471,25	473,00	UHF	C56	723,25	725,00	UHF
C15	477,25	479,00	UHF	C57	729,25	731,00	UHF
C16	483,25	485,00	UHF	C58	735,25	737,00	UHF
C17	489,25	491,00	UHF	C59	741,25	743,00	UHF
C18	495,25	497,00	UHF	C60	747,25	749,00	UHF
C19	501,25	503,00	UHF	C61	753,25	755,00	UHF
C20	507,25	509,00	UHF	C62	759,25	761,00	UHF
C21	513,25	515,00	UHF	C63	765,25	767,00	UHF
C22	519,25	521,00	UHF	C64	771,25	773,00	UHF
C23	525,25	527,00	UHF	C65	777,25	779,00	UHF
C24	531,25	533,00	UHF	C66	783,25	785,00	UHF
C25	537,25	539,00	UHF	C67	789,25	791,00	UHF
C26	543,25	545,00	UHF	C68	795,25	797,00	UHF
C27	549,25	551,00	UHF	C69	801,25	803,00	UHF
C28	555,25	557,00	UHF	C70	807,25	809,00	UHF
C29	561,25	563,00	UHF	C71	813,25	815,00	UHF
C30	567,25	569,00	UHF	C72	819,25	821,00	UHF
C31	573,25	575,00	UHF	C73	825,25	827,00	UHF
C32	579,25	581,00	UHF	C74	831,25	833,00	UHF
C33	585,25	587,00	UHF	C75	837,25	839,00	UHF
C34	591,25	593,00	UHF	C76	843,25	845,00	UHF
C35	597,25	599,00	UHF	C77	849,25	851,00	UHF
C36	603,25	605,00	UHF	C78	855,25	857,00	UHF
C37	609,25	611,00	UHF	C79	861,25	863,00	UHF
C38	615,25	617,00	UHF	C80	867,25	869,00	UHF
C39	621,25	623,00	UHF	C81	873,25	875,00	UHF
C40	627,25	629,00	UHF	C82	879,25	881,00	UHF
C41	633,25	635,00	UHF	C83	885,25	887,00	UHF

## B/B AUSTRALIA STANDARD

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND	CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
0	46,25	48,50	VHL	S22	310,25	312,50	VHH
1	57,25	59,50	VHL	S23	317,25	319,50	VHH
2	64,25	66,50	VHL	S24	324,25	326,50	VHH
3	86,25	88,50	VHL	S25	331,25	333,50	VHH
4	95,25	97,50	VHL	S26	338,25	340,50	VHH
5	102,25	104,50	VHL	S27	345,25	347,50	VHH
				S28	352,25	354,50	VHH
S1	105,25	107,50	VHL	S29	359,25	361,50	VHH
S2	112,25	114,50	VHL	S30	366,25	368,50	VHH
S3	119,25	121,50	VHL	S31	373,25	375,50	VHH
S4	126,25	128,50	VHL	S32	380,25	382,50	VHH
S5	133,25	135,50	VHL	S33	387,25	389,50	VHH
				S34	394,25	396,50	VHH
5A	138,25	140,50	VHL	S35	401,25	401,50	VHH
				S36	408,25	410,50	VHH
S6	140,25	142,50	VHL	S37	415,25	417,50	VHH
S7	147,25	149,50	VHL	S38	422,25	424,50	UHF
S8	154,25	156,50	VHH	S39	429,25	431,50	UHF
S9	161,25	163,50	VHH	S40	436,25	438,50	UHF
S10	168,25	170,50	VHH	S41	443,25	445,50	UHF
6	175,25	177,50	VHH	20	471,25	473,50	UHF
7	182,25	184,50	VHH	21	478,25	480,50	UHF
8	189,25	191,50	VHH	22	485,25	487,50	UHF
9	196,25	198,50	VHH	23	492,25	494,50	UHF
9A	203,25	205,50	VHH	24	499,25	501,50	UHF
10	209,25	211,50	VHH	25	506,25	508,50	UHF
10N	210,25	212,50	VHH	26	513,25	515,50	UHF
11	216,25	218,50	VHH	27	520,25	522,50	UHF
11N	217,25	219,50	VHH	28	527,25	529,50	UHF
12	224,25	226,50	VHH	29	534,25	536,50	UHF
				30	541,25	543,50	UHF
S11	231,25	233,50	VHH	31	548,25	550,50	UHF
S12	238,25	240,50	VHH	32	555,25	557,50	UHF
S13	245,25	247,50	VHH	33	562,25	564,50	UHF
S14	252,25	254,50	VHH	34	569,25	571,50	UHF
S15	259,25	261,50	VHH	35	576,25	578,50	UHF
S16	266,25	268,50	VHH	36	583,25	585,50	UHF
S17	273,25	275,50	VHH	37	590,25	592,50	UHF
S18	280,25	282,50	VHH	38	597,25	599,50	UHF
S19	287,25	289,50	VHH	39	604,25	606,50	UHF
S20	294,25	296,50	VHH	40	611,25	613,50	UHF
S21	303,25	305,50	VHH	41	618,25	620,50	UHF

## B/B AUSTRALIA STANDARD (CONTINUED)

CHAN.	IMAGE FREQ.	CENTER FREQ.	BAND
42	625,25	627,50	UHF
43	632,25	634,50	UHF
44	639,25	641,50	UHF
45	646,25	648,50	UHF
46	653,25	655,50	UHF
47	660,25	662,50	UHF
48	667,25	669,50	UHF
49	674,25	676,50	UHF
50	681,25	683,50	UHF
51	688,25	690,50	UHF
52	695,25	697,50	UHF
53	702,25	704,50	UHF
54	709,25	711,50	UHF
55	716,25	718,50	UHF
56	723,25	725,50	UHF
57	730,25	732,50	UHF
58	737,25	739,50	UHF
59	744,25	746,50	UHF
60	751,25	753,50	UHF
61	758,25	760,50	UHF
62	765,25	767,50	UHF
63	772,25	774,50	UHF
64	779,25	781,50	UHF
65	786,25	788,50	UHF
66	793,25	795,50	UHF
67	800,25	802,50	UHF
68	807,25	809,50	UHF
69	814,25	816,50	UHF
70	821,25	823,50	UHF
71	828,25	830,50	UHF
72	835,25	837,50	UHF
73	842,25	844,50	UHF
74	849,25	851,50	UHF
75	856,25	858,50	UHF



The logo for ANKARO, featuring the word in a bold, white, sans-serif font with a registered trademark symbol (®) to the upper right of the 'O'. The logo is centered on a solid blue background.

# ANKARO®

BCN Distribuciones, S.A. Unipersonal  
Niederlassung Deutschland  
Auf der Höhe, 8  
44536 Lünen, Deutschland

Tel. +49 231 8785 01  
Fax +49 231 8785 100  
[info@ankaro.com](mailto:info@ankaro.com)  
[www.ankaro.com](http://www.ankaro.com)